



Manual - Orion XS 12/12-70A DC-DC battery charger

Table of Contents

1. Safety instructions	1
2. General	2
2.1. Introduction	2
2.2. Features	2
2.3. What's in the box?	4
3. Installation	5
3.1. Mounting	5
3.2. Cable type recommendations	5
3.3. Using ferrules	5
3.4. Cable and fuse recommendations	7
3.5. Recommended torque	7
3.6. GND connection	8
3.7. Strain Relief	8
3.8. Connection setup for DC-DC power supply mode	9
3.9. Connection setup for charger mode	9
3.10. Connection setup for remote on/off	10
3.11. Wiring examples for BMS-controlled operation	11
3.12. External engine running signal wiring	12
4. Operation, configuration and monitoring	13
4.1. Automatic engine shutdown detection	13
4.1.1. How it works	13
4.1.2. Setup for Euro 6 vehicles	13
4.1.3. Using an external engine running signal	14
4.2. Emergency reverse charge	15
4.2.1. Starting an emergency reverse charge	16
4.3. LED indicators	18
4.4. Setup & monitoring with VictronConnect	19
4.4.1. Setup	19
4.4.2. Charger mode settings	19
4.4.3. Charger mode - Battery settings	20
4.4.4. Power supply mode	21
4.4.5. Power supply mode settings	21
4.4.6. Engine shutdown detection & input voltage lock-out	22
4.4.7. Product information page	25
4.4.8. Monitoring	26
4.4.9. Charger mode - Status screen	26
4.4.10. Charger mode - Graph screen	27
4.4.11. History screen	27
4.4.12. Trends screen	28
4.4.13. Instant readout over BLE	28
4.5. Monitoring with a GX device	29
4.6. Remote sensing with VE.Smart Networking	31
5. Troubleshooting & Support	32
5.1. The Orion XS is not operational	32
5.1.1. Visual Check	32
5.1.2. Battery supply check	33
5.1.3. Battery not charged	33
5.1.4. Reverse battery polarity	34
5.1.5. Battery full	34
5.1.6. Remote terminal is missing, is disconnected or external control is active	34
5.1.7. The charger is disabled	35
5.2. Batteries are undercharged	35
5.2.1. Too much DC load	35
5.2.2. Battery charge voltages are too low	35
5.2.3. Battery is almost full	35
5.2.4. Battery cable voltage drop	36
5.2.5. Temperature difference between Orion XS and battery	36
5.2.6. Insufficient alternator power	37
5.2.7. Wrong temperature compensation setting	37

5.2.8. Battery charge current too low	37
5.3. Batteries are overcharged	37
5.3.1. Battery charge voltages too high	37
5.3.2. Battery unable to deal with equalization	37
5.3.3. Battery old or faulty	39
5.4. Full rated output not reached	39
5.5. Communication issues	40
5.5.1. VictronConnect issues	40
5.5.2. VE.Direct port communication issues	40
5.5.3. Bluetooth issues	40
5.6. Emergency reverse charge issues	41
5.6.1. The emergency reverse charge button is greyed out	41
5.6.2. The reverse charge current is low or zero	41
5.6.3. The engine does not start after Battery ready	41
5.7. Settings or firmware issues	41
5.7.1. Incorrect settings	41
5.7.2. Firmware issues	42
5.7.3. Interrupted firmware update	42
5.8. Error and warning code overview	43
6. Technical data	45
6.1. Technical specifications	45
6.2. Compliance	47
6.3. Enclosure dimensions	48

1. Safety instructions



SAVE THESE INSTRUCTIONS – This manual contains important instructions that shall be followed during installation and maintenance.



Danger of explosion from sparking and danger of electric shock

General

Please read the safety instructions below before installing and using the Orion XS to avoid risks of fire, electric shocks, personal injuries or equipment damage.

This product is designed and tested in accordance with international standards. The equipment should be used for its designated application only and in accordance with the specified operating parameters.

Installation

- For electrical work, follow the local national wiring standards, regulations and these installation instructions.
- Install the product in a heatproof environment. Ensure therefore that there are no chemicals, plastic parts, curtains or other textiles, etc. in the immediate vicinity of the equipment.
- It is normal for the Orion XS to get hot during operation. Keep any objects that are heat-sensitive away.
- Never install or use the product at sites where gas or dust explosions could occur.
- Use flexible multi-stranded copper cables for the connections (UL: Class I; IEC: Class 5).
- The installation must include a fuse in accordance with the recommendations in the table [Cable type recommendations \[5\]](#).

Operation, service and maintenance

- Ensure that the equipment is used under proper operating conditions.
- This device is not to be used by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction.
- Always provide proper ventilation during charging.
- Avoid covering the Orion XS.
- Never place the battery charger on top of the battery during charging.
- Prevent sparks close to the battery. A battery being charged could emit explosive gasses.
- Refer to the battery manufacturer's specifications to ensure that the battery is suitable for use with this product. The safety instructions of the battery manufacturer must always be observed.
- In addition to this manual, the system operation or service manual must include a battery maintenance manual applicable to the type of batteries used.
- Do not use the device if it shows any signs of damage or does not function properly.
- Do not use the Orion XS if it is broken, defective, cracked, damaged, or malfunctioning.
- The Orion XS contains no serviceable parts.
- Regular maintenance of the Orion XS is not required.
- Avoid moisture, oil/soot/vapours, and keep the device clean.
- Clean the front side of the Orion XS using a dry cloth.

2. General

2.1. Introduction

The Orion XS can be used as a battery charger or as a power supply with a wide input and output voltage range.

In charger mode, the four-stage charge algorithm will increase battery life by properly charging the battery.

Especially in the case of vehicles with a Euro 5 or 6 smart alternator, which often supplies charging voltage that is too low even with the engine running or in the event of a voltage drop over long cables, controlled charging is crucial.

Controlled charging also protects the alternator in lithium systems from overloading, as the low impedance of lithium batteries results in a high alternator current.

In power supply mode, the output voltage remains stable regardless of the applied load or fluctuating input voltage (within the specified range).

The output voltage is fully adjustable and remains independent of the input voltage, thanks to the automatic buck-boost control. This control also guarantees that the current will never exceed the set value, even when the input voltage is higher than the output voltage.

The Orion XS can be set only to supply power when the engine is running. This is possible thanks to the integrated engine shutdown detection. This eliminates the need to adjust in-vehicle wiring or add an engine detection sensor to determine if charging can start. It also prevents the voltage on board the vehicle from getting too low. In addition to this detection, an external engine running signal from the vehicle can be used to force charging on instead.

If the starter battery is depleted, the emergency reverse charge function can charge it from the auxiliary battery, temporarily reversing the normal charge direction.

The Orion XS is fully programmed and monitored using the [VictronConnect App](#). This also includes remote access via VictronConnect-Remote (VC-R) when connected to a GX device (requires a GX device connection to the [VRM Portal](#)) via the integrated VE.Direct port, monitoring via the GX Remote Console or from a PC, Apple computer with macOS or Android device in conjunction with a [VE.Direct to USB interface](#) and VictronConnect. Discover all setting and monitoring options in the [Setup & monitoring with VictronConnect \[19\]](#) chapter and the [VictronConnect manual](#).

2.2. Features

Smart alternator compatibility

It is common for vehicle manufacturers to install "smart" ECU (Engine Control Unit) controlled alternators to increase fuel efficiency and reduce emissions. Smart alternators provide variable output voltage and shut down when not needed. The Orion XS has an integrated mechanism that detects whether the engine is running (engine shutdown detection), so the charger is only activated when the alternator is supplying power. This ensures that the charger only draws power when the alternator supplies power. Please refer to the [Automatic engine shutdown detection \[13\]](#) chapter and the [Setup for Euro 6 vehicles \[13\]](#) section for more information.

Separation of the starter battery and the auxiliary battery

The Orion XS separates the starter battery from the auxiliary battery.

Emergency reverse charge

If the starter battery is depleted, the emergency reverse charge function can charge it from the auxiliary battery, temporarily reversing the normal charge direction. The function is started with the VictronConnect App: the Orion XS reverse charges the starter battery for 15 minutes, followed by a 5-minute settling period during which the engine can be started. The auxiliary battery is protected against deep discharge at all times. See the [Emergency reverse charge \[15\]](#) section for more information.

Comprehensive electronic protection

The charger is protected against overtemperature (heat sink >90 °C) by reducing the output power when the maximum product temperature is reached.

- Protected against overload
- Protected against short circuit
- Protected against excessive temperatures

Adaptive charging in four stages

The Orion XS is configured by default for a four-stage charging process.

- Bulk — Absorption — Float — Storage

- **Bulk**

During this phase, the Orion XS supplies as much charging current as possible to quickly charge the batteries.

- **Absorption**

When the battery voltage reaches the absorption voltage setting, the charger switches to constant voltage aka absorption mode. For lead-acid batteries, it is important that the absorption time is kept short during superficial discharges to avoid overcharging the battery. After a deep discharge, the absorption time is automatically increased to ensure that the battery is fully charged again. For lithium batteries, the absorption time is fixed, 2 hours by default. Fixed or adjustable modes can be selected via the battery settings.

- **Float**

During this phase, the battery is charged with a trickle charge voltage to keep it in a fully charged state. When the battery voltage drops far below this level, for example, due to a high load for at least 1 minute, a new charge cycle is activated.

- **Storage**

The battery voltage is maintained at the configured storage voltage, which is slightly reduced compared to the float voltage to minimise gassing and extend battery life whilst the battery is unused and on continuous charge.

Flexible charge algorithm

The Orion XS has fully programmable charge algorithms and eight pre-programmed battery settings. Configurable with VictronConnect.

Adaptive Absorption Time

In adaptive absorption time mode, the correct absorption time is calculated automatically. Configurable with VictronConnect.

Repeated Absorption

To refresh the battery and prevent slow self-discharge while in storage stage over an extended period, a 1-hour absorption charge will automatically occur every 7 days (or as configured).

Temperature-compensated charging

The optimum charge voltage of a lead-acid battery is inversely proportional to temperature. The Orion XS measures the ambient temperature at the start of the charging phase and compensates for the temperature during charging. The temperature is measured again when the battery charger is in low current mode during absorption or storage. Special settings for a cold or warm environment are therefore not required.

Adjustable charge current

The charge current is adjustable with a minimum step size of 0,1 A. Configurable with VictronConnect.

Low-temperature shutdown

Prevents damage to lithium batteries by turning off the charger at low temperatures. Configurable with VictronConnect.

Input voltage lock-out

Shut down the charger when the input voltage falls below the lock-out value and restart when the input voltage rises above the restart value. Configurable with VictronConnect.

Remote On/Off

The Orion XS can be switched on and off remotely via the remote on/off connector or the VictronConnect App. Typical applications include a wired switch or a lithium battery with a Battery Management System (BMS) that has an ATC (allowed to charge) output.

DVCC controlled

The Orion XS can be DVCC controlled via a GX device, provided it is connected to the GX device via the VE.Direct port and the Orion is switched to charger mode (there is no DVCC control when the Orion XS is in power supply mode). Charging currents and voltages are then set automatically; thus, the internal bulk, absorption, and float algorithms are no longer used. Charging or discharging are stopped at low or high cell voltage or low temperature.

Note that when the Orion XS is configured as a charger and DVCC is enabled on the GX system, the output of the Orion XS must be connected to the main battery controlled by the GX system. The reason for this is that the GX system manages the Orion XS by synchronising its charging state with that of the main battery. If the output is instead connected to a secondary battery, one of the following actions must be taken:

1. Disable DVCC on the GX system.
2. Disconnect the Orion XS VE.Direct connection from the GX system.
3. Set the Orion XS to power supply mode. In this mode, the Orion XS outputs a fixed voltage and no longer follows a charge cycle.

For more details about DVCC, please see the GX device manual.

Monitoring locally via a GX device as well as remotely on the [VRM Portal](#)

Monitor and control (on/off) the Orion XS via a wired VE.Direct connection from a GX device such as the [Cerbo GX](#), [Ekrano GX](#), or use a PC, Apple computer (requires macOS), or Android device in conjunction with VictronConnect.

If the Orion XS is connected to a GX device with internet access, you can also monitor the Orion XS remotely via the VRM portal. Predefined widgets with all the necessary parameters are already available in the VRM portal. You can also create your own customised widgets.

Configuration and monitoring via VictronConnect App and Bluetooth

Built-in Bluetooth Smart: the wireless solution to change settings, monitor activities and update software using Apple and Android smartphones, tablets or other devices. Various parameters can be adjusted and monitored with the [VictronConnect App](#).

This also includes Instant Readout, which displays the most important data of the Orion XS (and other smart products) on the Device list page without the need to connect to the product. This includes visual notifications of warnings, alarms, and errors that enable diagnostics at a glance.

VictronConnect is available for Android, iOS, Windows and macOS. See the [VictronConnect manual](#) to get the most out of the VictronConnect app when connected to a Victron smart product.

Remote voltage-, temperature and/or current sensing via VE.Smart Networking

Use VE.Smart Networking to receive Vsense, Tsense and Isense data over the wireless network for your Orion XS DC-DC battery charger, for example, from a BMV, a SmartShunt, or a Smart Battery Sense¹⁾. The charger uses the available information from the battery to optimise the charging parameters. This improves charging efficiency and extends battery life. For more information, please see [Remote sensing with VE.Smart Networking \[31\]](#) and the VE.Smart Networking manual which can be downloaded from the [VictronConnect download section](#). Please note that the Orion XS does not support synchronised charging.

¹⁾ The Smart Battery Sense does not support Isense.

Not waterproof

The Orion XS 12/12-70A DC-DC battery charger is not waterproof. The overall ingress protection rating of the unit is IP20. The internal electronics are rated IP65.

Silent

Cooling is provided by two integrated blower fans mounted on the bottom plate. Although this Orion XS model is equipped with active cooling, the fans operate at a very low noise level.

2.3. What's in the box?

Orion XS 12/12-70A DC-DC battery charger with terminal block for remote on/off connection



3. Installation

3.1. Mounting

- Mount on a non-flammable surface. The orientation is not critical.
- Ensure that the clearance between the mounting surface and the fan inlet is not obstructed. Mount on a flat surface to maintain proper airflow.
- For optimum performance, a minimum of 10cm space should be kept free around the product for cooling. With limited cooling, e.g. due to insufficient ventilation, the charging current will be reduced sooner than at the specified maximum ambient temperature.
- With limited cooling or extreme ambient temperature, the charger can become hot (especially the bottom plate). Due to internal temperature control, the heat sink will never get warmer than 90 °C; this is no problem for the charger. Make sure that the mounting surface can withstand this temperature.
- Mount close to the battery but never directly above the battery (to prevent damage from gassing of the battery).

3.2. Cable type recommendations

For correct connection of a cable to the input/output screw terminals, stranded wires with flexible cores can be used according to:

- IEC 60228 - Class 2 (stranded), Class 5 (flexible)
- UL486A-B - Class B/C (stranded), Class I (flexible)

Cables with twisted cores are very stiff, which means that they are rarely used in practice. The table below provides an overview of how to recognise the different wire classes.

Single wire diameter in the bundle		
Nominal cross-section	Class 5 (IEC)	Class I (UL)
10mm ² / 8AWG (8,4mm ²)	0,4mm	24AWG
16mm ² / 6AWG (13,3mm ²)	0,4mm	24AWG
25mm ² / 4AWG (21,1mm ²)	0,4mm	24 AWG

3.3. Using ferrules

The use of ferrules is not mandatory. However, they can simplify installation by bundling fine-strand conductors. The installer remains responsible for ensuring that the cable is correctly secured.

The connecting cable, with or without a ferrule, must be properly clamped to achieve low contact resistance and a reliable long-term connection.

The Orion XS 12/12-70A screw terminal is suitable for:

- Stranded copper conductors
- Flexible (fine-strand) copper conductors
- Conductors fitted with bootlace ferrules

This allows full flexibility in installation method.

If ferrules are used, select bootlace ferrules that allow the terminal strain relief to properly clamp the cable insulation.

Integrated TORK-KRIMP® technology – no pre-crimping required

The Orion XS 12/12-70A incorporates TORK-KRIMP®, a patented connection technology that eliminates the need for pre-crimping ferrules.

With conventional terminals, ferrules must be crimped onto the conductor using a dedicated crimping tool before insertion. TORK-KRIMP removes this step.

With TORK-KRIMP:

- A standard bootlace ferrule can be placed onto the stripped conductor without pre-crimping

- When the terminal screw is tightened to the specified torque, the connector simultaneously:
 - Compresses the ferrule onto the conductor
 - Secures the conductor within the terminal
 - Forms a gas-tight, low-resistance connection

This means no separate crimping tool is required.

For many installers, this may be unfamiliar. Traditionally, ferrules must be crimped using a dedicated tool matched to the ferrule size. TORK-KRIMP eliminates this requirement, simplifying installation while maintaining a high-quality electrical connection.




Preparation for correct mounting of fine-strand conductors

1. Cut the conductor cleanly and square. Ensure no strands are loose or staggered.
2. Strip the insulation carefully to avoid damaging individual strands.
3. Fully open the terminal screw before inserting the conductor. This prevents strands from being trapped behind the screw, particularly when using the maximum conductor size.
4. Tighten the terminal screw to the specified torque; see [Recommended torque \[7\]](#), taking conductor size and class into account. Never apply less than the recommended torque.
5. Maintain the specified torque for at least 5 seconds. This allows the connection to settle and ensures maximum clamping force, maintaining a gas-tight contact pattern during thermal cycling. This is a UL486 test requirement and applies to both factory and field installations.




Tip for fitting a bootlace ferrule

1. Strip the insulation, leaving a narrow insulation ring attached to the conductor.
2. Slide the insulation ring to the stripped end to bundle the strands.
3. Fit the ferrule over the conductor while sliding the insulation ring back.
4. Remove the temporary insulation ring.
5. Position the ferrule fully onto the conductor.

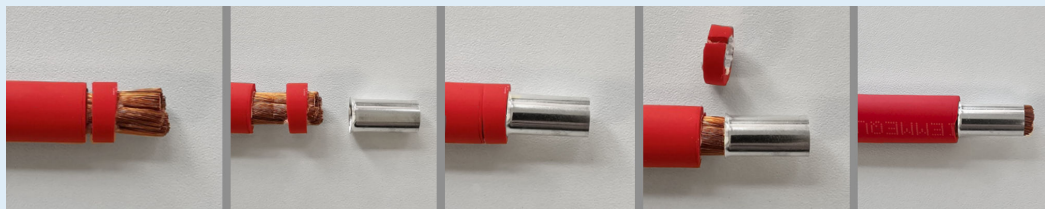

3.4. Cable and fuse recommendations

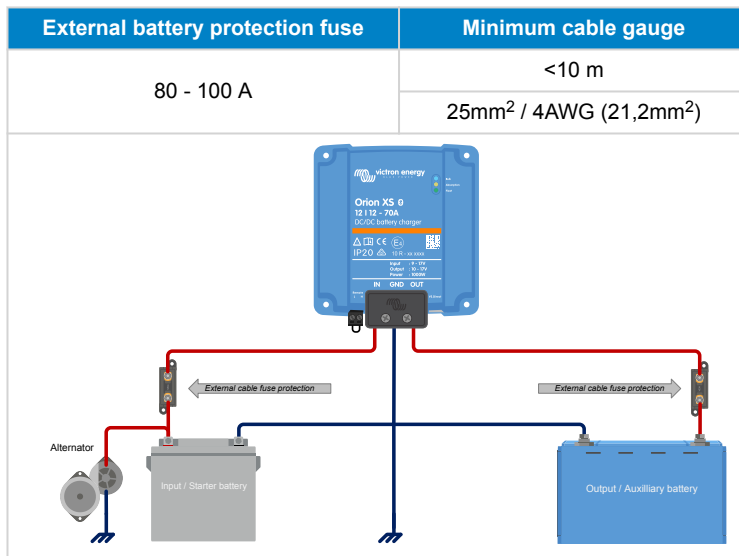

3.5. Recommended torque



AWG	mm ²	in-lb	Nm
4	25	50	5,6
6 - 10	16 - 6	40	4,5
8 - 12	10 - 4	25	2,8

For the cable cover use a torque of <0.7Nm (6 in-lb).

Screwdriver bit information

The screwdriver bit must have a blade thickness of 1,2 mm (0.046") and minimal taper over at least the first 2 mm (0.08") of engagement. This reduces the risk of cam-out and ensures correct torque transfer.


Common 6,3 mm (0.25") screwdriver bits with a thinner 1 mm (0.04") blade are not recommended.

3.6. GND connection

In many cases, the GND connection is connected to the chassis via a cable lug. For a low-impedance connection, the cable lug must have direct contact with the metal of the chassis, the contact surface must therefore be free of paint, see below images.



Make sure the GND connection on the vehicle's chassis has a low impedance.

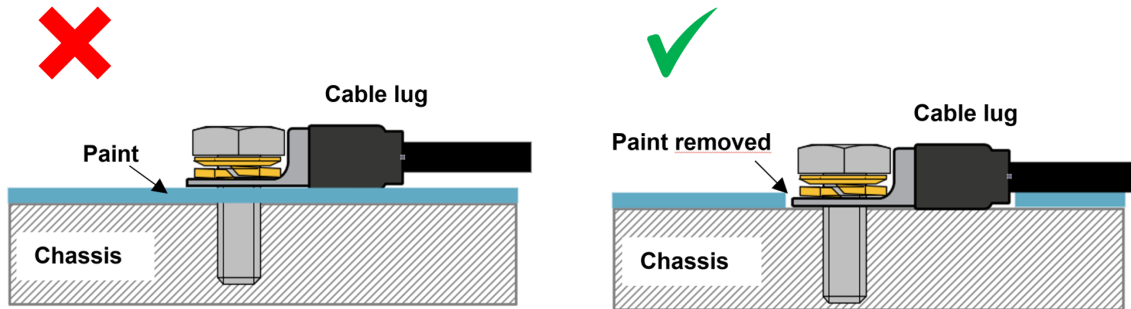


3.7. Strain Relief

The connector type in this charger is sensitive to constant mechanical stress. Prolonged loading (pulling, pushing or twisting) of the connector should be avoided. For this reason, the charger is equipped with a strain relief in the cable cover. It is very important that the strain relief is applied correctly. The weight of the wire or other forces hanging from the connectors should be close to zero.



Insufficient strain relief can lead to connector damage in the long term.


The strain relief in the cable cover is designed so that wiring with an outer diameter $>9\text{mm}$ is sufficiently clamped. With thinner wiring, the diameter must be increased to $>9\text{mm}$; this can be done simply by applying shrink tubing.

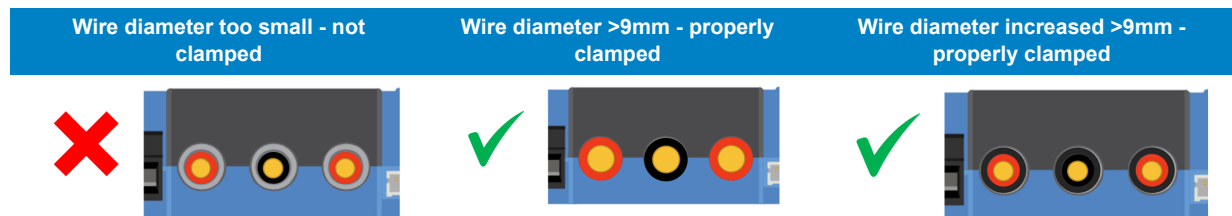

3.8. Connection setup for DC-DC power supply mode

1. Disconnect the remote on/off (remove the wire bridge or remove the entire remote on/off terminal block).
2. Connect the input power cables.
3. Open the VictronConnect app to set up the product (**always adjust the output voltage before connecting a load or battery to the output**).
For details, see [Power supply mode settings \[21\]](#).
4. Connect the load.
5. Reconnect the remote on/off to activate the product. The product is now ready for use.


Typical connection setting as DC-DC battery charger

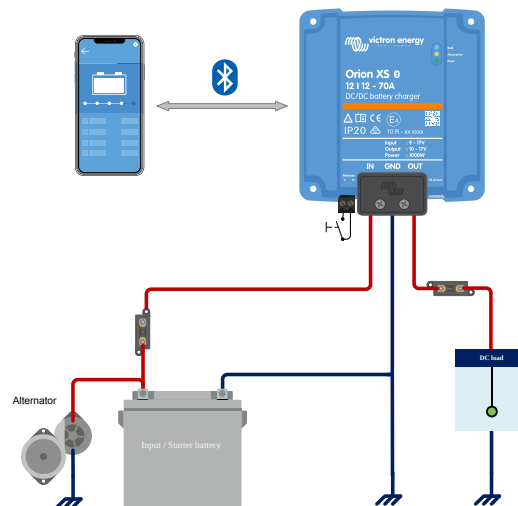

3.9. Connection setup for charger mode

1. Disconnect the remote on/off (remove the wire bridge or remove the entire remote on/off terminal block).
2. Connect the input power cables.
3. Open the VictronConnect App to set up the product (**always set up the correct charging algorithm before connecting a battery to the output**).
For details, see [Charger mode settings \[19\]](#).
4. Connect the battery to be charged.
5. Reconnect the remote on/off to activate the product. The product is now ready for use.


Typical connection setting as DC-DC battery charger:

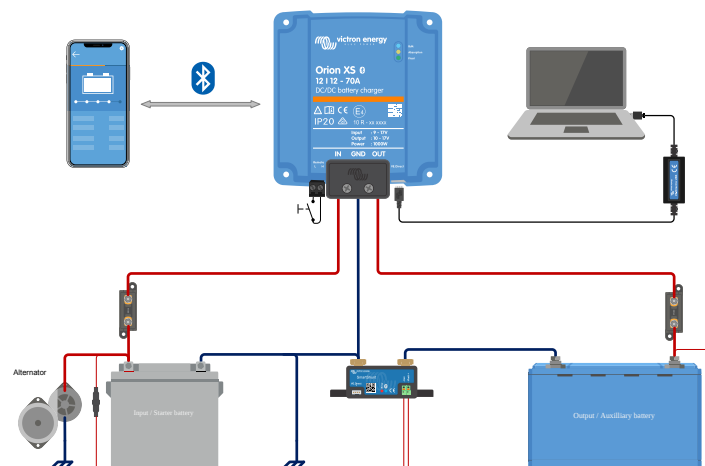

3.10. Connection setup for remote on/off


The remote on/off function switches the Orion XS on and off via the two-pole remote connector (L- and H-pin), without the need to interrupt the heavy DC cabling. It gives the versatility to choose from four wiring options, depending on what is available in the installation: a simple switch, a switched positive or negative signal already present in the system, or a BMS charge control contact.

The Orion XS is delivered with a wire loop (bridge) installed between the L- and H-pin. With the wire loop in place, the unit is always on. To switch the unit on and off remotely, remove the wire loop and use one of the options below.

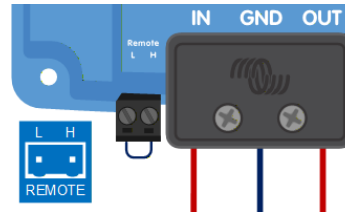


Note the voltage tolerance between L- & H-pin: +/- 70VDC

a) A switch wired between the L-H pins

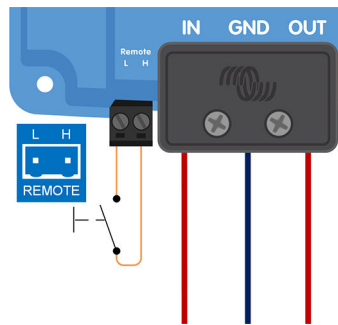


ON switch level impedance between L-H pins < 30kΩ

b) A switch wired between battery pos. and the H-pin

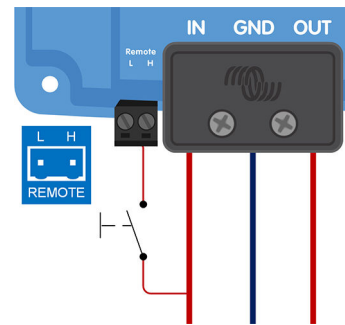


ON switch level > 4V

c) A switch wired between the L-pin and ground

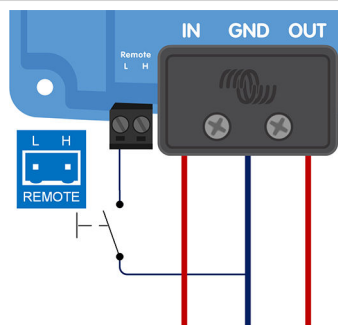

ON switch level < 6V

d) BMS control via the H-pin

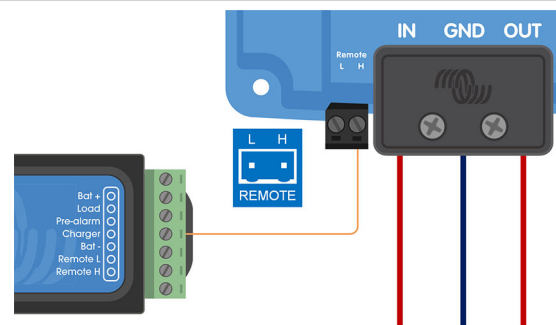

BMS ATC output controls the H-pin

The Orion XS is on when at least one of the following conditions is met: the L- and H-pin are interconnected, either by the wire loop or by a switch (option a), the H-pin is pulled high (options b and d) or the L-pin is pulled to battery minus (option c). If none of these conditions is met, the unit is off.

Option a) is the simplest: a plain switch or relay contact, with no connection to the battery poles. Options b) and d) suit installations where a switched positive signal is available, such as a BMS charge control (ATC) contact. Option c) suits installations where a switched negative signal is available, for example a signal switched to the chassis of a vehicle. Option c) cannot be combined with an external engine running signal; see section [External engine running signal wiring \[12\]](#).

3.11. Wiring examples for BMS-controlled operation

To ensure smooth charging and prevent the risk of overcharging, the chargers must be controlled by the BMS. Depending on the BMS model, this control is either digital, via DVCC, or analogue, via the ATC contact.

DVCC-compatible BMS models


The BMS models listed below can control compatible chargers digitally via DVCC.

- VE.Bus BMS V2
- VE.Bus BMS NG
- Lynx Smart BMS
- Lynx Smart BMS NG



DVCC compatibility requires Orion XS firmware v1.03 or later and Venus OS firmware v3.20 or later on the GX device.

Connect a VE.Direct cable between the Orion XS and the GX device and follow the DVCC instructions in the user manual of the BMS. There is no need to wire the BMS ATC contact to the remote H-pin.

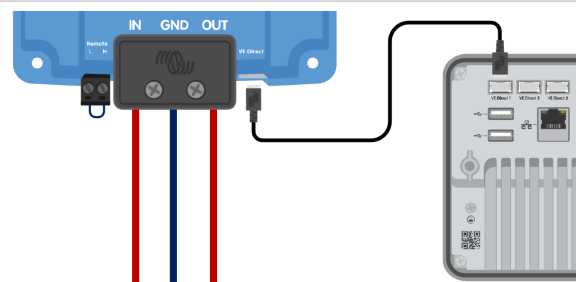


The Orion XS is controlled by DVCC via a GX device.

Non-DVCC BMS models

The BMS models listed below control chargers via the ATC contact.

- VE.Bus BMS
- smallBMS with pre-alarm
- smallBMS NG
- Smart BMS 12-200
- Smart BMS CL 12-200

Wire the BMS ATC contact to the remote H-pin.

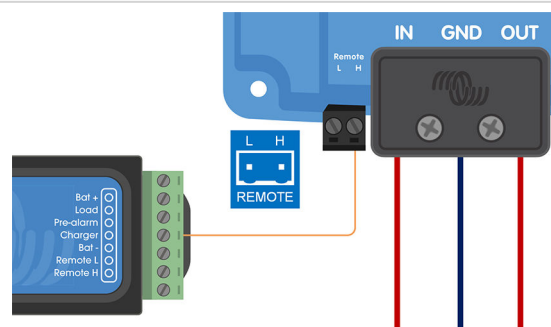

The Orion XS is controlled by the BMS ATC contact.



Depending on the BMS model, the ATC contact may have a different name, such as "Charge Disconnect", "Charger" or "ATC". Please refer to the relevant section of the BMS manual.

3.12. External engine running signal wiring


An external engine running signal tells the Orion XS that the engine is running. See the [Using an external engine running signal \[14\]](#) section for when such a signal is needed and which sources can provide one.

The signal is connected to the L-pin of the remote connector. Applying >8V to the L-pin overrides the engine shutdown detection and activates the charger, even when engine shutdown has been detected.



This function does not override or replace the remote on/off function. The Orion XS must be switched on via remote on/off for the signal to have effect. This can be the wire loop fitted on delivery, or one of the wiring options shown in section [Connection setup for remote on/off \[10\]](#).

Wiring examples for the external signal with the various remote on/off options

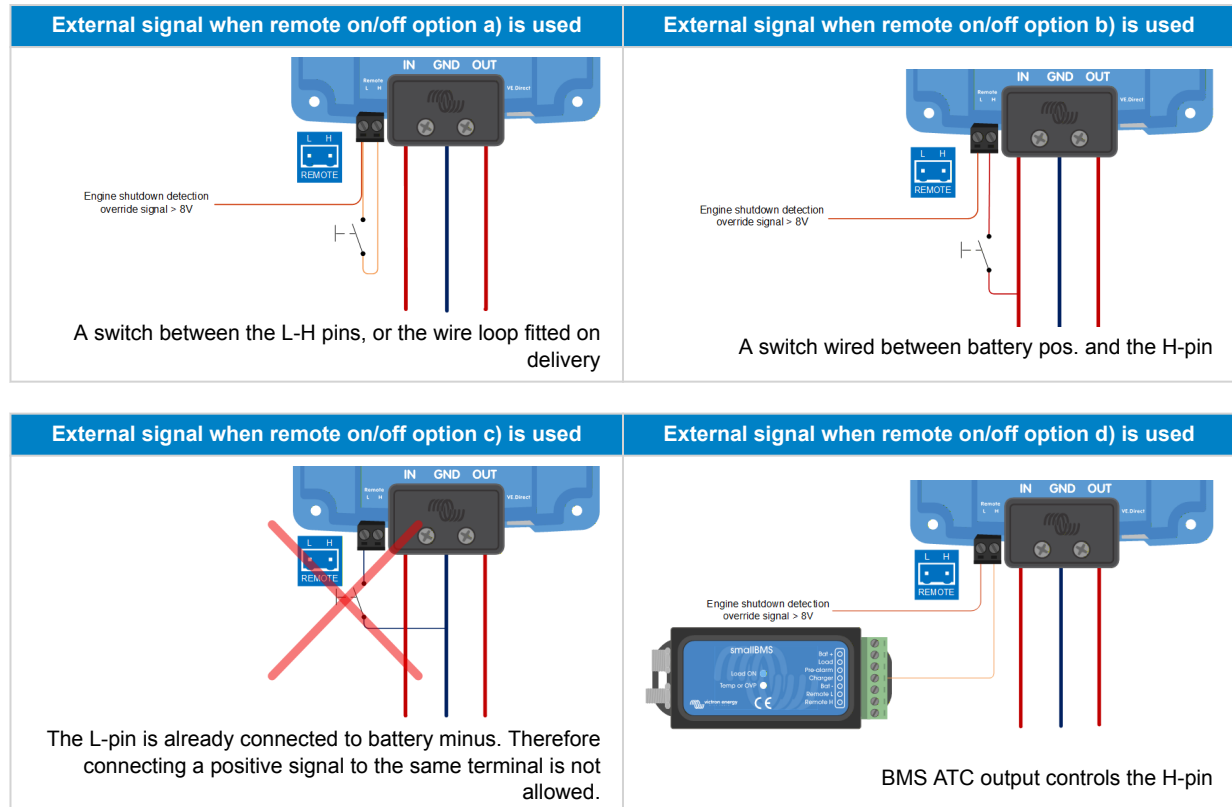

Wiring a signal that is pulled to ground

Some vehicles provide an engine running signal that is pulled to ground (battery minus) while the engine is running, and is open circuit while the engine is off. This is the opposite of what the L-pin expects, so the signal cannot be connected to the L-pin directly. Use a relay to convert it:

1. Connect the relay coil between a fused supply from the starter battery positive and the vehicle's engine running terminal.
2. Connect the normally open relay contact between a fused supply from the starter battery positive and the L-pin.

While the engine runs, the vehicle terminal pulls the relay coil to ground, the relay energises and the contact applies >8V to the L-pin. When the engine stops, the vehicle terminal opens, the relay releases and the signal on the L-pin is no longer present.



Engine running terminals in a vehicle can typically only sink a small current. Use them to drive the relay coil only, never a load. Use a relay with a built-in suppression diode across the coil, or fit one, to protect the vehicle electronics. Consult the vehicle manufacturer's documentation for the availability and ratings of such a signal.



Leave the engine shutdown detection enabled in the VictronConnect App when an external engine running signal is used; see the [Using an external engine running signal \[14\]](#) section.

4. Operation, configuration and monitoring

4.1. Automatic engine shutdown detection

The automatic engine shutdown detection simplifies the Orion XS system by detecting whether the engine is running, without wiring additional switches or sensors. The factory default setting will work with most conventional and smart alternators but can be re-configured with the VictronConnect App.


The detection is based on the alternator voltage. Conventional alternators will generate a fixed voltage (e.g. 14V), whereas the voltage of smart alternators can vary between 12.5V to 15V (for a 12V system). Smart alternators in a regenerative braking system often show large voltage variations.

Engine shutdown detection is only active in charger mode. The feature can be configured, disabled and reactivated as described in the [Engine shutdown detection & input voltage lock-out \[22\]](#) section. In power supply mode, the Input voltage lock-out determines when the output is active.

In installations where the alternator voltage does not give the detection enough to work with, an external engine running signal can be used instead; see the [Using an external engine running signal \[14\]](#) section.

4.1.1. How it works

The following procedure describes the operation of the engine shutdown detection sequence.

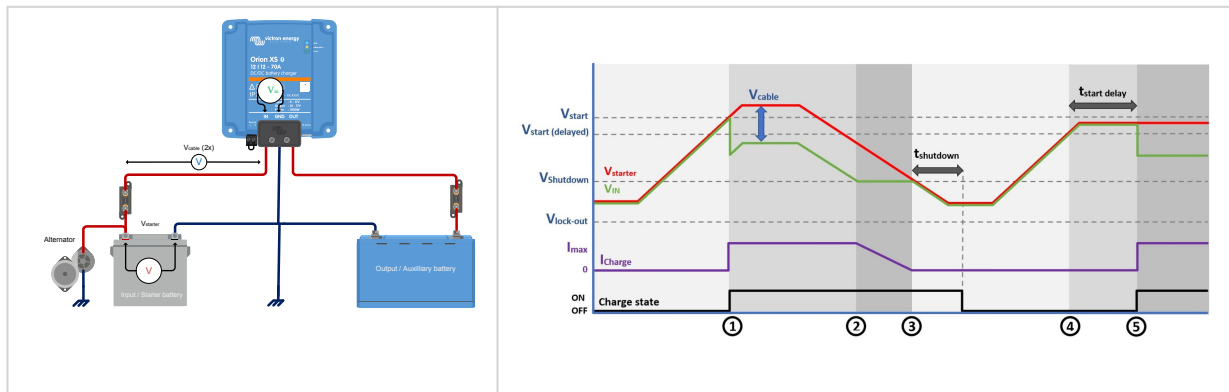

Engine shutdown detection sequence

- 0 → 1: If the engine runs, the alternator voltage will ramp up. When $V_{\text{starter}} > V_{\text{start}}$, charging is enabled.
- 1 → 2: The input current produces a voltage across the input cable (V_{cable}); this voltage reduces the voltage measured by the charger (V_{IN}). If $V_{\text{IN}} > V_{\text{shutdown}}$, the charger will operate at I_{max} .
- 2 → 3: If $V_{\text{IN}} \leq V_{\text{shutdown}}$, the charge current will be reduced to prevent V_{IN} to drop below V_{shutdown} .
- 3 → 4: If $V_{\text{IN}} < V_{\text{shutdown}}$ for longer than 1min (t_{shutdown}), "engine off" is detected and charging is disabled. If $V_{\text{IN}} > V_{\text{shutdown}}$ before t_{shutdown} runs out, charging remains enabled.
- 4 → 5: If $V_{\text{start(delay)}} < V_{\text{IN}} < V_{\text{start}}$, charging is enabled after $t_{\text{start delay}}$ (configurable).

4.1.2. Setup for Euro 6 vehicles

Euro 6 vehicles use a smart alternator that is managed by the vehicle. While driving, the alternator management system decides whether the alternator is needed, based on the electrical demand of the vehicle and on how much energy can be recovered during braking. As a result, the charge voltage is not constant: it can vary roughly between 12.5V and 15V in a 12V system, and the alternator can be switched off completely for a while. When the alternator is switched off, the voltage at the starter battery falls back to the static battery voltage (~12.6 V). The engine shutdown detection reads that voltage and can conclude that the engine has stopped, even though the vehicle is still driving. During this phase, the Orion XS will not charge, potentially resulting in an undercharged auxiliary battery.

The alternator management system also reacts to the electrical demand in the vehicle. When enough loads are present, the alternator produces at least a float-level voltage (~13.8V), which the engine shutdown detection recognises without difficulty. If the base load in the system is sufficiently high, the alternator remains active for most of the drive and the automatic detection works well.

Whether this happens depends on the vehicle and on the installation, so the engine shutdown detection sometimes needs fine-tuning. Four settings are available for this in the VictronConnect App: the start voltage, the delayed start voltage, the delayed

start voltage delay and the shutdown voltage. See the [Engine shutdown detection & input voltage lock-out \[22\]](#) section for a description of each setting. Lowering the start and shutdown voltages makes the detection tolerate the lower charge voltages of a smart alternator, at the cost of a smaller margin above the static battery voltage.

Be aware that charging strategies differ from vehicle to vehicle, even within the same brand and model. Owners of the same vehicle model may find that some can successfully utilise engine shutdown detection, while others experience undercharged auxiliary batteries.

In a vehicle where the alternator is switched off for long periods and the base load is low, fine-tuning may not be enough to keep charging going. An external engine running signal can be used instead; see the [Using an external engine running signal \[14\]](#) section.

4.1.3. Using an external engine running signal

The engine shutdown detection determines whether the engine is running from the input voltage. In some vehicles the alternator voltage does not follow the engine, for example when a smart alternator is switched off for long periods while driving. In such an installation, a signal from the vehicle can be used to tell the Orion XS that the engine is running.

Such a signal is connected to the remote L-pin. While the signal is present, it overrides the engine shutdown detection and charging is forced on. While the signal is absent, the Orion XS returns to the engine shutdown detection, which decides whether the engine has stopped. For the wiring, see the [External engine running signal wiring \[12\]](#) section.



Leave the engine shutdown detection enabled in the VictronConnect App when an external engine running signal is used. The signal only forces charging on; stopping charging when the engine is off remains the task of the engine shutdown detection.



When the engine shutdown detection has been switched off in the VictronConnect App ('forced charging'), **current will be drawn from the starter battery even if the engine is not running**, regardless of any external signal that is connected. The input voltage lockout is then the only limit left to disable charging automatically; make sure this level is not set too low, in most applications 12.5V is sufficiently low.

Which signal to use

Several sources can provide an external signal. Each has its drawbacks, which should be understood before choosing one.

- **Vehicle engine running signal:**

This is the most accurate source, as the signal comes from the vehicle's own system and follows the engine directly. However, accessing this signal can be challenging, and it may require activating the function in the vehicle's software.

- **Pulled-low engine running signal:**

Some vehicles provide an engine running signal that is pulled to ground (battery minus) while the engine is running. This is the opposite of what the L-pin expects, so the signal cannot be connected to the L-pin directly. A relay is used to convert it; see the [External engine running signal wiring \[12\]](#) section.

- **D+:**

The D+ signal, which comes from the alternator, indicates that the alternator is active. In Euro 6 vehicles this signal is often no longer provided, making it unusable. There are D+ simulator devices that generate a signal based on the alternator voltage, but these work from the same voltage that the engine shutdown detection already measures, so in an installation where the alternator voltage is the problem they offer no advantage.

- **Ignition switch:**

It is common to use the ignition switch to enable charging. While this method is not inherently wrong, it allows the Orion XS to discharge the starter battery when the ignition is on but the engine is not running. This requires the user to be vigilant about when charging is permitted, to avoid a flat starter battery. Therefore, we do not recommend using the ignition switch to enable charging.

- **Vibration sensor:**

This device generates a voltage when it detects engine vibrations. Be aware that external vibrations, such as those from transport on a boat or train, or even loud music, can be mistaken for a running engine. To mitigate this, power the vibration sensor from an ignition-switched source, so that charging is only permitted when both the ignition is on and vibrations are detected.

- **CAN bus interface with engine running output:**

This device reads the engine running command broadcast on the CAN bus and converts it into an on/off signal. This requires tapping into the CAN bus, and the ease of access varies between vehicles.

4.2. Emergency reverse charge

The emergency reverse charge function charges a depleted starter battery from the auxiliary battery, so that the engine can be started again. It is intended for situations where the starter battery no longer holds enough energy to crank the engine, for example after the vehicle has been parked for a long time or when the starter battery has been drained by a load.

During an emergency reverse charge, the Orion XS temporarily reverses its normal charge direction: energy flows from the auxiliary battery connected to the output to the starter battery connected to the input. In the VictronConnect App, this reversed flow is shown as negative input and output current values.



Emergency reverse charge function requires Orion XS firmware v1.15 and VictronConnect v6.43 or later.

For the procedure, see [Starting an emergency reverse charge \[16\]](#).

Start conditions

The emergency reverse charge button on the Status screen of the VictronConnect App is always present, but it is only active while an emergency reverse charge is possible.

An emergency reverse charge is only possible when the Orion XS is in charger mode and the charger is off for one or both of the following reasons:


- The input voltage lock-out is active.
- The engine shutdown detection has determined that the engine is not running.

A remote off does not block an emergency reverse charge. The function stays available when the Orion XS is switched off via remote on/off.

The emergency reverse charge sequence

An emergency reverse charge runs for a fixed time and consists of two phases:

1. **Emergency reverse charge, 15 minutes.** The Orion XS draws energy from the auxiliary battery and uses it to charge the starter battery. The app shows *Emergency reverse charge* together with the time remaining.
2. **Settling period, 5 minutes.** The charger is disabled, so that it cannot draw energy from the starter battery or the alternator. This allows the starter battery to settle and the engine to be started. The app shows *Battery ready* together with the time remaining.

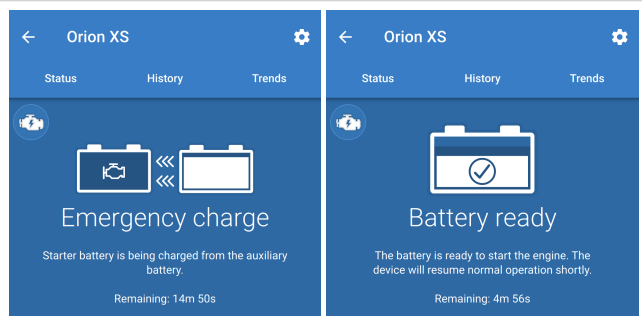

After the settling period has ended, the Orion XS resumes normal operation.



The engine can be started as soon as the app shows *Battery ready*.



Battery ready indicates that the 15-minute emergency reverse charge has finished. It does not guarantee that the starter battery is able to crank the engine. An emergency reverse charge transfers a limited amount of energy to the starter battery; it cannot restore a starter battery that is defective or at the end of its service life.

Reverse charge current

The reverse charge current is half the rated charge current of the device. If a lower input or output current limit is configured for normal charging, the lowest configured limit is used instead. The app states the limit that will be applied before the emergency reverse charge is started.

The starter battery is charged to a maximum of 14,4 V.

To protect the auxiliary battery against deep discharge, the Orion XS maintains the auxiliary battery voltage at 12 V. As the auxiliary battery approaches this level, the reverse charge current is reduced, so that as much energy as possible is transferred without deeply discharging the auxiliary battery.

If the auxiliary battery is already at or below this level when the emergency reverse charge starts, the function still runs but no current is transferred. Current only begins to flow if the auxiliary battery voltage rises above the level again during the charge, for example because another charging source is charging the auxiliary battery.



Minimise the load on the auxiliary battery from other connected devices during an emergency reverse charge.

The requested reverse charge current is not always reached. See [The reverse charge current is low or zero \[41\]](#) for the possible causes.

Monitoring and settings

The state, the input and output voltages and the input and output currents can be followed in the VictronConnect App. It is not necessary to stay connected to the Orion XS while the sequence runs.

The settings cannot be changed while an emergency reverse charge is in progress, including during the settling period. The Settings page of the VictronConnect App shows a message stating that the settings will be available again once the emergency reverse charge has finished.

4.2.1. Starting an emergency reverse charge

An emergency reverse charge is started from the VictronConnect App. The Orion XS must be set to charger mode; the emergency reverse charge button is greyed out in power supply mode.

For a description of the function and the conditions under which an emergency reverse charge can take place, see [Emergency reverse charge \[15\]](#).




In systems with more than one Orion XS connected in parallel, either start an emergency reverse charge on all of them or switch the others off first.

A Orion XS that is reverse charging raises the starter battery voltage. Another Orion XS that is still in normal operation reads that rise as a running engine and starts charging forward, so the two units charge against each other.

The result is a circulating current between the units. Energy is drawn from the auxiliary battery without reaching the starter battery, and the engine may still not start.

1. Connect to the Orion XS with the VictronConnect App.
2. On the Status screen, tap the engine icon in the top left corner.
3. The *Start emergency reverse charge* window opens. It states the voltage the starter battery will be charged to and the maximum reverse charge current that will be applied.
4. Select *I understand the feature* and tap *START*.
5. The app shows *Emergency reverse charge* together with the time remaining. After 15 minutes the app shows *Battery ready*.
6. Start the engine while the app shows *Battery ready*.

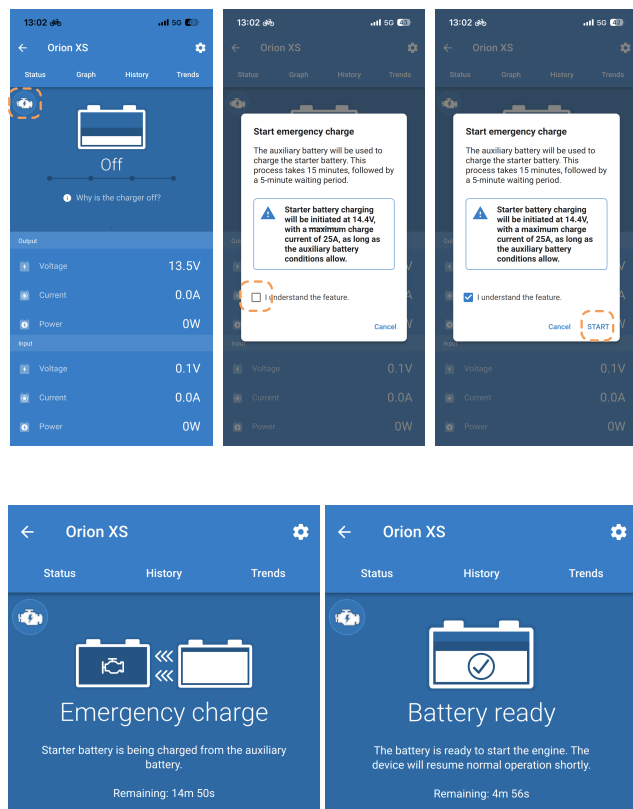


Stopping an emergency reverse charge

An emergency reverse charge can be stopped before it has finished. Tap the engine icon again and confirm with **STOP** in the window that opens.



The settling period does not run in this case: the Orion XS returns to normal operation directly.

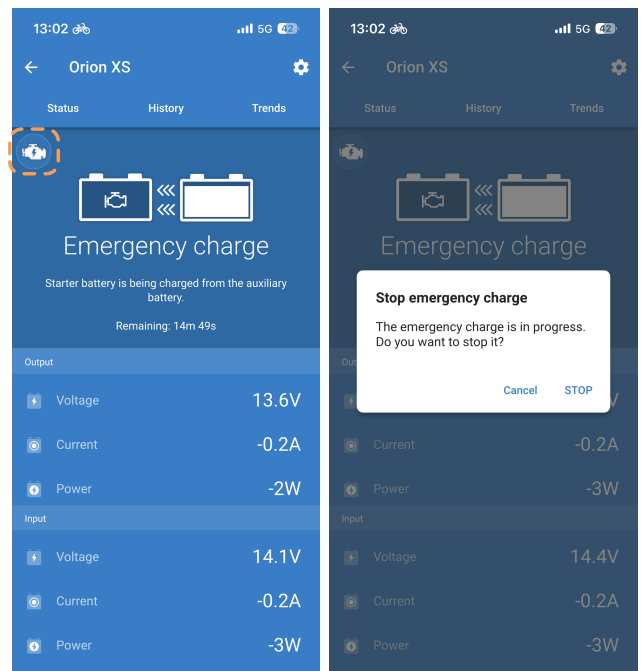

4.3. LED indicators

The Orion XS has 3 coloured LEDs showing the charger's status. Their meaning and behaviour are explained below.

LED status:

LED behaviour	Description	Symbol
On	Permanently on	
Off	Permanently off	
Very slow blinking	Blinking 1x per 1.6s	
Slow blinking	Blinking 2x per 1.6s	
Blinking	Blinking 4x per 1.6s	
Fast blinking	Blinking 8x per 1.6s	
Pulsating	Short pulses per 1.6s	

LED indications overview:

Orion XS status	Bulk LED	Absorption LED	Float LED
Off			
Error mode			
Identify			
Power supply mode			
Emergency reverse charge			
Battery ready			
Bulk mode			
Absorption mode			
Float mode			
Storage mode			
Equalisation mode			
Repeated absorption mode			
BatterySafe			
Software update			
Other			

4.4. Setup & monitoring with VictronConnect

This chapter will help you get the most out of your Orion XS using the [VictronConnect App](#) and requires minimal knowledge of this battery charger.

For more general information on the [VictronConnect App](#), how to install it, how to pair it with your device and how to update the firmware, see the [VictronConnect manual](#).

4.4.1. Setup

VictronConnect allows to change or adjust various settings of the Orion XS. This is possible through the settings option, which can be accessed by clicking on the cog wheel icon in the top right corner of the screen. The setting options vary depending on the selected operating mode.

4.4.2. Charger mode settings

When in Charger Mode, these are the available settings:

Function: Allows for the choice between “Charger” or “Power supply” mode. When Charger mode is selected, the Orion XS will follow the charge algorithm. For more information about the charge algorithm, please read the [Features \[2\]](#) section.

Charger enabled/disabled: The charger is enabled by default. Use the switch to disable the charger if necessary.

Input current: Limits the maximum current drawn from the input source. This is particularly important to avoid overloading an alternator or other weak input sources.

The value can be adjusted between 1 A and 70 A in 0,1 A increments.


Output current: Limits the maximum output current.

The value can be adjusted between 1 A and 70 A in 0,1 A increments.

Battery settings: Allows to change the battery settings in order to adjust the absorption voltage, float voltage, and others to fit the battery being charged; see the [Charger mode - Battery settings \[20\]](#) section for details.

Engine shutdown detection: Allows three voltage limits and a delay time to be selected. One voltage limit is used to determine whether the engine has stopped, and two are used to detect whether the engine is running (again). Normally, a minimum difference of 0,2 V is used for optimal operation. If desired, the protection can still be disabled by the user. For more information, please read the [Automatic engine shutdown detection \[13\]](#) and [Engine shutdown detection & input voltage lock-out \[22\]](#) sections.

Input voltage lock-out: Allows to choose between two thresholds, one to set the lock-out value and another for the restart value. Normally, a minimum difference of 0.5 V is recommended for proper operation. The protection can still be disabled if desired by the user. For more information about the input voltage lock-out, please read the [Automatic engine shutdown detection \[13\]](#) section.

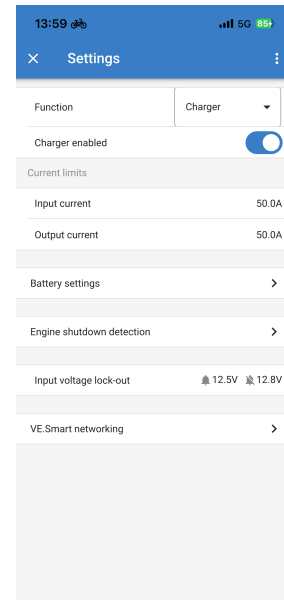

4.4.3. Charger mode - Battery settings

- **Battery preset:**

- Battery preset allows to select the battery type, accept factory defaults, or enter your own preset values to be used for the battery charging algorithm. The Absorption voltage, Float voltage, Storage voltage, Bulk time limit, Re-bulk voltage offset, Adaptive absorption time and Absorption time settings are all configured to a preset value - but can also be user-defined.
- User-defined presets can be stored in the preset library - in this way, installers will not have to define all the values each time they are configuring a new installation.
- By selecting Edit Presets, custom parameters can be set depending on the selected preset (battery type). Be sure to follow the battery manufacturer's recommendations for your battery type. The main parameters are as follows:

- **Absorption voltage**

- **Float voltage**

- **Storage voltage**

- **Equalization voltage** (disabled for the Victron Lithium Smart Battery preset)

- **Temperature compensation** (disabled for the Victron Lithium Smart Battery preset)

- **Low temperature cut-off** (configurable for lithium batteries)

Note that this setting only takes effect when the battery temperature is shared by other devices, for example, by a BMV-712 or SmartShunt in a VE.Smart network. This setting is not effective if a BMS controls the charger.

- **Expert mode:**

Activating Expert mode enables additional settings, depending on the selected preset. Note that the defaults work well for most cases. Change expert settings only if your equipment and battery has special requirements:

- **BatterySafe** (prevent excessive gassing by automatically limiting the rate of voltage increase)

- **Bulk time limit**

Set the maximum bulk time allowed for the charger.

- **Re-bulk voltage offset** (when the battery voltage drops 0.1V below the re-bulk voltage for one minute, the charge cycle will restart)

The re-bulk offset voltage determines what is the offset between the float voltage (or absorption if it is lower) and the re-bulk voltage. The re-bulk voltage is the battery voltage threshold that triggers another charge cycle. For example, when the charger cannot maintain the battery voltage due to a high load, the battery voltage will fall, and a new charge cycle will be started once the battery voltage drops below the re-bulk voltage.


- **Absorption duration** (Adaptive, fixed absorption)

The absorption time depends on whether the adaptive absorption time algorithm is used or not. If **Adaptive absorption time** is not enabled, the charger uses a **Fixed absorption time** that is user-selectable. When the **Adaptive absorption time** is enabled, the charger will determine the absorption time based on the bulk elapsed time of that charge cycle. The **Maximum absorption time** is also set by the user in this case.

- **Maximum absorption time**

- **Tail current** (the charger will end absorption and switch to float or recondition when the charge current drops below the tail current threshold)

- **Repeated absorption**

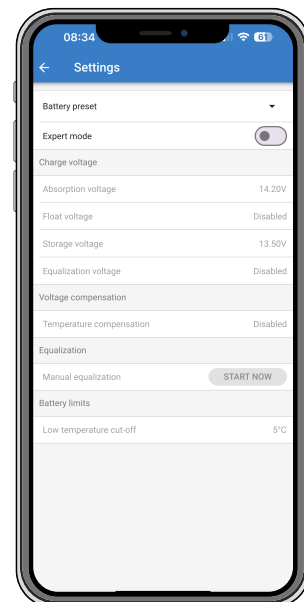

- **Equalization current percentage** (maximum current during equalization will be this percentage of the max charge current)
- **Equalization stop mode** (Automatic on voltage, fixed time)
- **Maximum equalization duration**
- **Manual equalization**

4.4.4. Power supply mode

Orion XS [serial number] or a specified custom name confirms the connected device.

Mode icon: indicates which mode the Orion XS is operating in (in this case **Power Supply Mode**).

Output voltage: Voltage measured at the output terminals of the device.

Output current: Output amperage.


Output power: Output power in Watts.

Input voltage: Voltage measured at the input terminals of the device.

Input current: Current drawn by the charger.

Input power: Input power in Watts.

Why is the power supply off?: Appears instead of the Power Supply Mode text and displays the reason why the Orion XS is turned off.

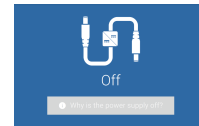

4.4.5. Power supply mode settings

Function: Allows you to choose between Charger and Power Supply Mode. When the Power Supply Mode is selected, the Orion XS keeps the output voltage stable as specified in the setting.


Output enabled/disabled: Output is enabled by default. Use the switch to disable the output if necessary.

Input current: Limits the maximum current drawn from the input source.


Output current: Limits the maximum output current.

Output voltage: Allows to choose the output voltage when Power Supply Mode is selected. Note that the minimum and maximum voltages needs to be within the product limit (i.e.: 10V to 17V for a 12V output Orion XS).

Input voltage lock-out: Allows to choose between two thresholds. One to set the shutdown level and another for the restart value. Normally, a minimum difference of 0.5V is recommended for proper operation.

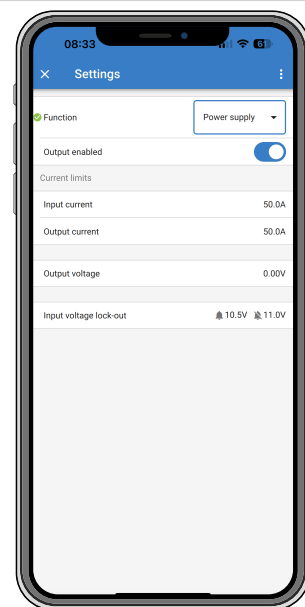

4.4.6. Engine shutdown detection & input voltage lock-out

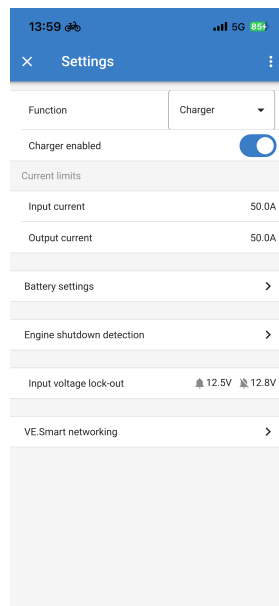

Engine shutdown detection

To configure engine shutdown detection settings, open VictronConnect, connect to your Orion XS and from the status page press the cog icon to get to the Settings page.

The following settings can be changed with VictronConnect:

Engine shutdown detection enabled/disabled: The engine shutdown detection is always enabled by default whenever the charger mode is selected. When the function is disabled or when power supply mode is selected, the engine is considered to be running, so no shutdown detection will take place. Leave the engine shutdown detection enabled when an external engine running signal is connected: the signal only forces charging on, and disabling the detection makes the charger charge continuously regardless of the signal. See Using an external engine running signal [14].	Engine shutdown detection enabled When disabled, the engine is always considered to be running. 
Alternator type: For the type of alternator you can choose between "Smart alternator", "Regular alternator" and "User defined". When the "Smart alternator" option is selected, the default values for the smart alternator will be applied to the engine shutdown detection settings. The same will happen when "Regular alternator" option is selected. When any of the settings differs from the default values of the last two option, the "User defined" option will be selected. Default: smart alternator.	Smart Alternator Regular Alternator User defined
Start voltage (V_{start}): At this level, charging starts immediately.	Start voltage When the input voltage reaches this level, the engine is immediately considered to be running, allowing the charge procedure to start. — 14,00 + CANCEL OK
Delayed start voltage ($V_{\text{start(delay)}}$): Smart alternators can generate a lower voltage when the engine is running, therefore a lower start level is necessary for these systems. To ensure that the starter battery is recharged after starting the engine, charging of the auxiliary battery is delayed during this condition. The energy used during starting must be replenished to ensure that the starter battery remains properly charged.	Delayed start voltage When the input voltage is above this level for more than the "Delayed start voltage delay", the engine is considered to be running, allowing the charge procedure to start. This delay is useful to allow the starter battery to be recharged after starting up the engine, for example. — 13,30 + CANCEL OK

Delayed start voltage delay ($t_{\text{start delay}}$): Recharge time for the starter battery during start voltage mode. Example: If the starter draws 150 A for 5 seconds to start the engine, approx. ~0,2 Ah is drawn from the starter battery. If, during engine idling, the alternator can only generate 20 A, it takes $150 \text{ A} / 20 \text{ A} \times 5 \text{ s} = 37,5 \text{ s}$ to recharge the starter battery.

Delayed start voltage ...

Delay to be used for the "Delayed start voltage".

— 120s +

CANCEL OK

Shutdown voltage (V_{shutdown}): This level corresponds with the engine being off. This keeps the starter battery fully charged and provides a hysteresis with respect to the start level. The hysteresis must be large enough to prevent V_{IN} to drop to V_{shutdown} which would result in charge current reduction. Action will be taken after t_{shutdown} runs out (1 minute); this allows charging during temporary low-voltage conditions.

Setting range for start and stop voltages: 9 to 35 V

Shutdown voltage

When the input voltage gets below this level for more than 60s, the engine is considered to be shutdown, making the charging procedure stop.

— 13,10 +

CANCEL OK

The default values depend on the selected alternator type. Values are given as 12V system / 24V system.

Setting	Smart alternator	Regular alternator
Start voltage (V_{start})	14 V / 28 V	14 V / 28 V
Delayed start voltage ($V_{\text{start(delay)}}$)	13,3 V / 26,6 V	13,8 V / 27,6 V
Delayed start voltage delay ($t_{\text{start delay}}$)	120 s	120 s
Shutdown voltage (V_{shutdown})	13,1 V / 26,2 V	13,5 V / 27 V

When the charger is off because the engine shutdown detection has determined that the engine is not running, or because the input voltage lock-out is active, an emergency reverse charge can be started from the VictronConnect App. See [Emergency reverse charge \[15\]](#).

Input voltage lock-out

Setup input voltage lock-out: Input voltage lock-out is the minimum level at which charging is allowed, below this level charging stops immediately. Default (in charger mode): lock-out: 12,5 V/25 V; restart: 12,8 V/25,6 V. Default (in power supply mode): lock-out: 10,5 V/21 V; restart: 12 V/24 V.

When 'forced charging' is enabled, current will be drawn from the starter battery if the engine is not running. Setting the lock-out level very low or deactivating the input voltage lock-out can result in a depleted starter battery.

Input voltage lock-out

When the input voltage falls below lock-out value the output will be deactivated until the input voltage rises above restart value.

Input voltage lock-out

Lock-out value — 12,5V +

Restart value — 12,8V +

CANCEL OK

To setup input voltage lock-out, two criteria are important:

- **Minimum alternator voltage:** A smart alternator can operate at very low alternator voltage ($< 12,5 \text{ V}/25 \text{ V}$) e.g. when the vehicle accelerates. Charging during this low voltage is allowed during t_{shutdown} as shown in “engine shutdown detection sequence 3→4”. If charging must remain enabled during this period, the lock-out level must at least be set below the minimum alternator voltage.

Note: When the input undervoltage period exceeds t_{shutdown} , engine shutdown detection will disable charging.

- **Voltage drop across the input cable:** As seen in “engine shutdown detection sequence 1→3”, V_{IN} will be lowered by V_{cable} . When the alternator voltage drops quickly (smart alternator), the voltage control needs some time to reduce charge current and keep V_{IN} at V_{shutdown} . During this adjustment period, V_{IN} can even drop below $V_{\text{lock-out}}$, which activates the undervoltage protection and stops charging. To prevent this, $V_{\text{lock-out}}$ must be set as follows: $V_{\text{lock-out}} \leq V_{\text{shutdown}} - V_{\text{cable}}$.


Example: Calculate the input cable voltage drop:

- Distance between starter battery and charger: 5 m
- $V_{\text{shutdown}} = 13,1 \text{ V}$. Recommended wire gauge: 16 mm^2
- Cable resistance: $\sim 1,1 \text{ m}\Omega/\text{m}$ @ 20°C , thus $R_{\text{cable}} = 1,1 \text{ m}\Omega \times 10 \text{ m}$ ($2 \times 5 \text{ m}$) = $11 \text{ m}\Omega$
- At a maximum input current of 50 A, this results in:
- $V_{\text{cable}} = 11 \text{ m}\Omega \times 50 \text{ A} = 550 \text{ mV}$
- $V_{\text{lock-out}} \leq V_{\text{shutdown}} - V_{\text{cable}} = 13,1 \text{ V} - 550 \text{ mV} = 12,55 \text{ V}$.

Cable connections, external fuses, temperature, etc. influence the total cable resistance.

4.4.7. Product information page

By clicking the  button on the top right of the Settings menu, it is possible to access the product information screen:

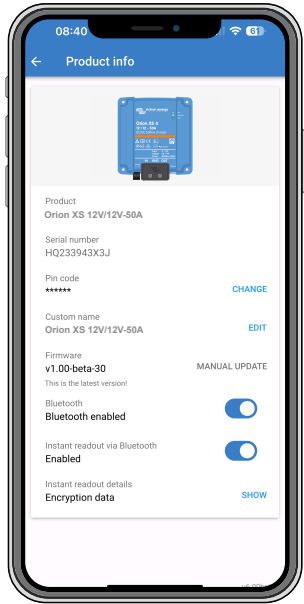Product shows the Orion XS model.	
Serial number shows the serial number of the unit.	
Pin code allows the pin code to be changed. This is recommended to be done so settings and information won't be easy to access.	
Custom name allows you to change a custom product name to your liking. By default, the product name "Orion XS" plus the serial number is displayed.	
Firmware shows the firmware version currently installed on the device and also allows the charger to be updated if required.	
Bluetooth: Bluetooth is enabled by default and can be disabled if necessary. To re-enable Bluetooth, please see the "How to disable and re-enable Bluetooth" chapter in the VictronConnect manual .	
Note that re-enabling Bluetooth requires a VE.Direct to USB interface connection between the Orion XS and a PC, Mac or Android device. iOS devices such as the iPhone and iPad do not support serial USB devices.	
Instant readout via Bluetooth: Use the slider to disable/enable Instant readout.	
Instant readout details: Displays the MAC address and encryption key for the unit.	

4.4.8. Monitoring

4.4.9. Charger mode - Status screen

Orion XS [serial number] or a specified custom name confirms the connected device.

Mode icon: indicates which mode the Orion XS is operating in (in this case **Charger Mode**).

Charger State:

- **Bulk:** During this stage, the Orion XS supplies the set charging current to quickly charge the batteries. When the battery voltage reaches the Absorption voltage setting, the Orion XS activates the Absorption stage.
- **Absorption:** From this stage, the Orion XS switches to the constant voltage mode, where a pre-set absorption voltage suitable to the battery type (see [Charger mode - Battery settings \[20\]](#)) is applied. When the Absorption time has elapsed, the Orion XS activates the Float stage.
- **Float:** During this stage, the float voltage is applied to the battery to maintain a fully charged state. When the battery voltage drops below Re-bulk voltage for at least 1 minute, a new charge cycle will be triggered.
- **Storage:** During this phase, storage voltage is applied to the battery. If the battery has been connected to the battery charger for more than 48 hours, further lowering the charging voltage can prevent corrosion in lead-acid batteries.
- **Emergency reverse charge:** The starter battery is being charged from the auxiliary battery, and the time remaining is shown. During an emergency reverse charge, the input and output currents are shown as negative values, indicating the reversed direction of the energy flow. See [Emergency reverse charge \[15\]](#).
- **Battery ready:** The emergency reverse charge has finished and the engine can be started. The time remaining of the settling period is shown, after which the Orion XS resumes normal operation.
- Other possible states depending on the system and battery settings are:
Off (engine not running or other reason), Repeated absorption, Equalize, Auto-equalize, BatterySafe, External control (controlled by a BMS), Power Supply Mode

Output voltage: Voltage measured at the output terminals of the device.

Output current: Current measured at the output terminals of the device.



Output power: Output power in Watts.

Input voltage: Voltage measured at the input terminals of the device.

Input current: Current measured at the input terminals of the device.

Input power: Input power in Watts.


Why is the charger off?: Appears below the battery icon and indicates the reason why the Orion XS is turned off.

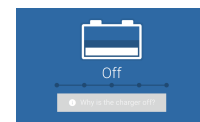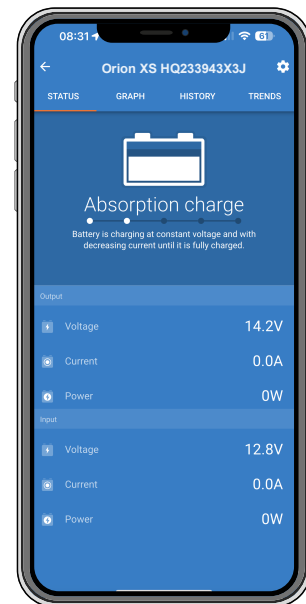

4.4.10. Charger mode - Graph screen

Orion XS [serial number] or a specified custom name confirms the connected device.

Charger State Graph: indicates the current charging state of the Orion XS and provides a short description of the current state.

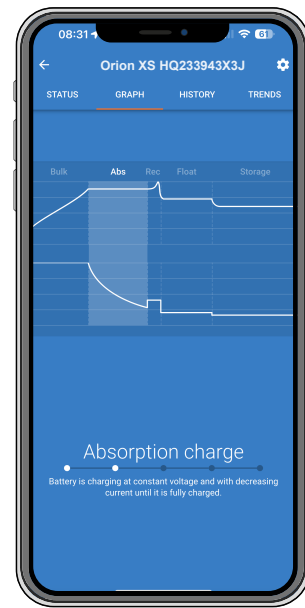

4.4.11. History screen

The history page shows a summary of the charge cycles over the previous 40 cycles. Swipe the screen to the right or left to show any of the 40 cycles. Each column represents a cycle. Tapping on one of the bars reveals further information about duration and current for each of the charge states. Other items are:

Status

Elapsed

Charge: The accumulated charge current

Maintain: The current that keeps the battery fully charged during the float or storage phase.

Type: Battery profile used

Vstart: The lowest battery voltage at the start of the charge cycle

Vend: The lowest battery voltage at the end of the charge cycle

Operation time: Accumulated run time of the Orion XS

Cycles started: Number of charge cycles started

Cycles completed: The number of charge cycles completed (must have reached float or storage voltage stage)



Charged Ah: Total amphotours charged with the Orion XS



4.4.12. Trends screen

The VictronConnect app allows data to be displayed graphically via the trends screen. The prerequisite is that the VictronConnect app must be open and connected with the Orion XS. The data is not stored permanently. The following parameters can be displayed:

- Input voltage
- Input current
- Input power
- Output voltage
- Output current
- Output power
- Battery temperature (only if it is provided by an external device, for example, a BMV via a VE.Smart Network).

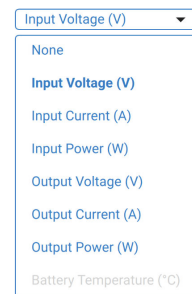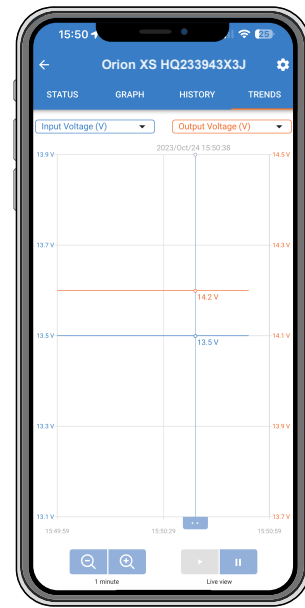


4.4.13. Instant readout over BLE


VictronConnect can display key data of the Orion XS (and other compatible smart products) on the Device list page without the need to connect to the product. This includes visual notifications of warnings, alarms, and errors that enable diagnostics at a glance. Please see the [Instant Readout chapter](#) in the VictronConnect manual for more information and how to set it up.

The advantage is:

- Better range than a regular Bluetooth connection
- No need to connect to the smart product
- Key data at a glance
- Encrypted data

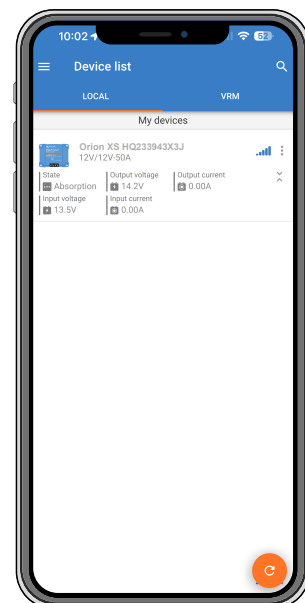

4.5. Monitoring with a GX device

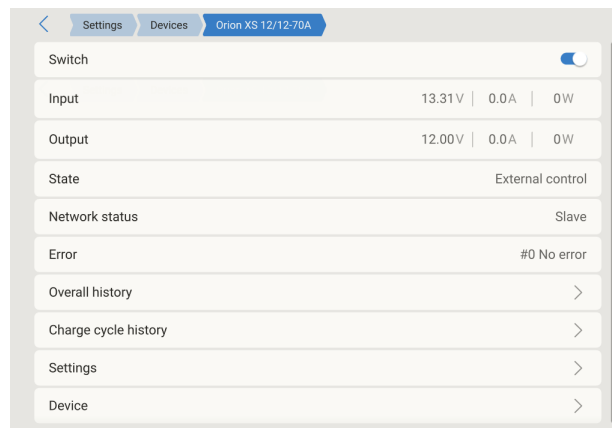

When the Orion XS is connected to the GX device via its VE.Direct port, it can also be monitored and turned on/off via a GX device's remote console or the VRM portal. The following requirements are necessary for this:

- A GX device such as [Cerbo GX](#) and [Ekrano GX](#).
- A [VE.Direct cable](#) or a [VE.Direct to USB interface](#).
- Optionally, an internet connection of the GX device to the [VRM portal](#). This enables remote monitoring from anywhere worldwide and adds VictronConnect Remote (VC-R) functionality. Orion XSVC-R enables remote access even without a direct Bluetooth connection as if standing directly next to the device, with the same functionality. For more details on VC-R, see the [VictronConnect manual](#).

Setup

Connect the Orion XS to the GX device using a VE.Direct cable. It will then automatically appear in the device list of the GX device.

Monitoring

To get to the Orion XS detail page, tap the Orion in the Device list. The detail page offers the following options:

Switch: Turns the Orion XS on and off. Depending on the configuration made in VictronConnect, either charger or power supply mode will be started.

Input: Shows the input voltage, current and power as measured at the input terminals.

Output: Shows the output voltage, current and power as measured at the output terminals.

State: Displays the current status of the charger or power supply mode. Possible states depending on the device mode and settings are:



Off (engine not running, or other reason, check the Off reason in VictronConnect), Bulk, Absorption, Float, Storage, Repeated-absorption, Equalize, Auto-equalize, BatterySafe, Ext. control (controlled by a BMS), Power Supply.

Network status: This can be either Slave if controlled by DVCC or Standalone device if not controlled by DVCC.

Error: If the Orion XS is in an error state, the error code will be displayed here.

Overall history: Provides an overview of operation time, number of charge cycles, charged Ah, etc.

Charge cycle history: Provides an overview of the last 30 charging cycles.

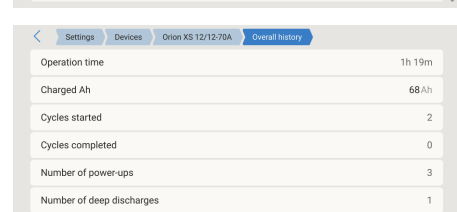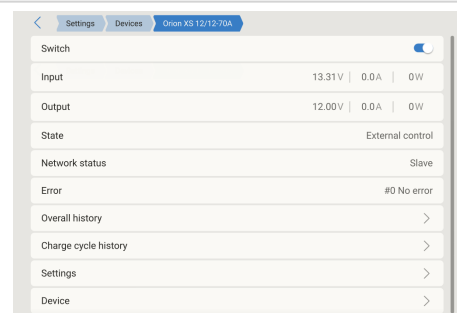

Settings: Provides access to a submenu in which the application type of the Orion XS can be configured.

- **Alternator charging the main battery** - Select this when the Orion XS is used to charge the main battery from an alternator. When selected, an additional charging source tile named Alternator is shown in the graphical overview.
- **Charging another battery from the main battery** - Select this when the Orion XS charges a secondary (service) battery from the main battery.
- **BMS controlled** - Indicates whether the Orion XS is currently controlled by a Battery Management System (BMS).
- **BMS control** – Resets BMS control detection. Use Reset if the system configuration has changed or if no BMS is present but the device remains in BMS-controlled mode.

Device: Provides additional device information and allows to assign a custom device name.

The screenshots show the following settings:

- Settings - Output battery:**
 - Output battery: Alternator charging the main battery
 - BMS controlled: Yes
 - BMS control: [Reset]
 - BMS control is enabled automatically when a BMS is present. Reset it if the system configuration changed or if there is no BMS present.
- Settings - Output battery:**
 - Alternator charging the main battery: ☒
 - Charging another battery from the main battery: ☐
- Settings - Device:**
 - Connection: USB
 - Product: Victron dc/dc charger
 - Name: Orion XS 12/12-70A
 - Product ID: 0xA3F2
 - Firmware version: v1.14-beta-01
 - VRM instance: 289
 - Serial number: HQ123456789

4.6. Remote sensing with VE.Smart Networking

With VE.Smart Networking, remote battery voltage, temperature and current sensing can be added to your Orion XS when paired with a battery sensor like a BMV, SmartShunt or Smart Battery Sense. The Orion XS will receive the available information from the battery and use that data to optimise its charge parameters.

The sensed battery current is used for the tail current setting, while the battery temperature is used for temperature voltage compensation and protection.

The sensed battery voltage is used to compensate for voltage drop over the battery cables. Compensating for voltage drop creates a mismatch between the voltage measured at the Orion XS connector and the battery terminals:


$$V_{\text{OrionXSconnector}} = V_{\text{battery}} + V_{\text{compensation}}$$



Voltage drop compensation ($V_{\text{compensation}}$) saturates at 2V.

Effects when the battery is disconnected

By disconnecting the battery, the physical connection between the charger and the remote sensing device is lost. The charger is not aware that the battery is disconnected and will increase its output voltage to compensate for the voltage difference. In this case, the output voltage will rise until it reaches the saturation level (=2V). E.g. with $V_{\text{battery}}=12.6\text{V}$, the output voltage ($V_{\text{connector}}$) saturates at 14.6V.

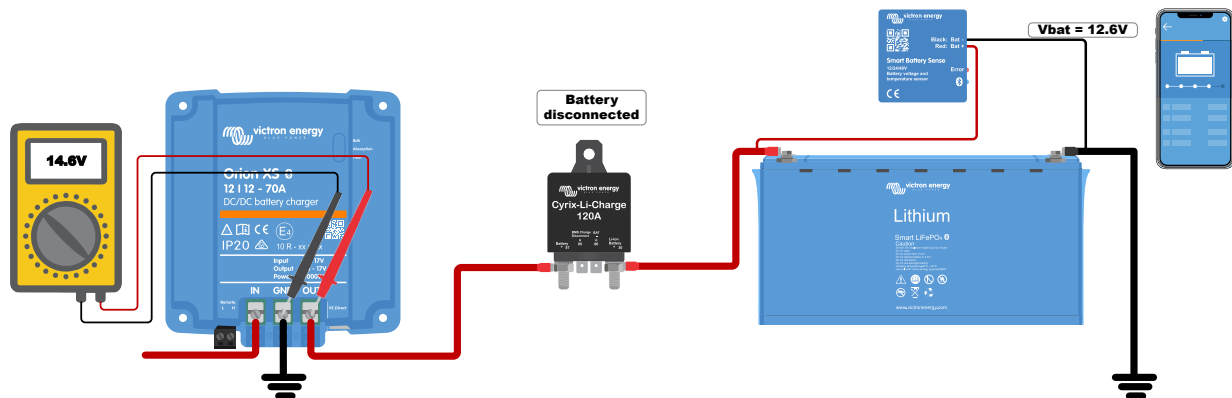

Although it is not a problem that the Orion XS outputs a higher voltage, it can be confusing when analysing the voltage levels in a system and comparing them with the readings of the VictronConnect/GX device. Therefore, when analysing, make sure that all necessary physical connections are made.

5. Troubleshooting & Support

Consult this chapter in case of unexpected behaviour or if you suspect a product fault.

The correct troubleshooting and support process is first to consult the common issues described in this chapter.

Should this fail to resolve the issue, contact the point of purchase for technical support. If the point of purchase is unknown, refer to the [Victron Energy Support webpage](#).

5.1. The Orion XS is not operational

Once powered up and operational, the controller LED(s) will illuminate or flash and can communicate with VictronConnect via Bluetooth or via the VE.Direct port.

Once the charger is powered up, VictronConnect can be used to:

1. Check the charger status
2. Check for error messages
3. Update firmware
4. Make or change settings

If the unit does not power up, use this chapter to check the possible reasons why the controller is not operational.

5.1.1. Visual Check

Before any electrical inspection, it is a good idea to visually check the charger to determine if the charger is damaged.

1. Check for mechanical damage and burn marks.
Note that this kind of damage is usually not covered by warranty.
2. Are the connecting wires making contact with the plug/terminals?
3. Are the wires stripped to the correct length and tightened with the correct torque?
See [Recommended torque \[7\]](#).
4. Inspect the battery terminals.

If there are burn marks on the terminals or if the cables or connectors are molten, this damage is usually not covered by warranty.

5.1.2. Battery supply check

Check whether the charger is receiving battery power; this can be on the input and output or both.

Battery voltage can normally be checked via the VictronConnect App, a display or a GX device. However, in this case, the charger is not operational, so the battery voltage must be measured manually. Measure the battery voltage at the charger battery terminals with a multimeter.



The reason for measuring the battery voltage at the charger terminals is to rule out possible problems with the wiring, fuses and/or circuit breakers in the path between the battery and the charger.

Depending on the result of the measurement, do the following:

Battery voltage	Operational state	Action to take
No voltage	Off	Restore the battery supply
Correct voltage	Off	There might be a fault with the charger Contact your Victron dealer or distributor
Correct voltage	On	Check for active errors via the VictronConnect app, a monitor or a GX device.

5.1.3. Battery not charged

This chapter lists all possible reasons why the Orion XS does not charge the batteries, and the steps you can take to remedy the situation.

There are a number of reasons why the Orion XS might not charge the batteries.

For example:

- Issues with the battery or system wiring
- Incorrect settings
- The Orion XS is remotely controlled by a BMS or other device via its remote on/off


In the VictronConnect App, you will find a clickable link at the bottom of the status screen that says 'Why is the charger off?'.

When you click the link, an explanation will appear as to why the charger is disabled. Check this first.

5.1.4. Reverse battery polarity

Reverse polarity is when the positive and the negative battery cables have been accidentally swapped. The battery negative has been connected to the positive terminal and the battery positive has been connected to the negative terminal.

Example of correct and incorrect (reverse) battery polarity

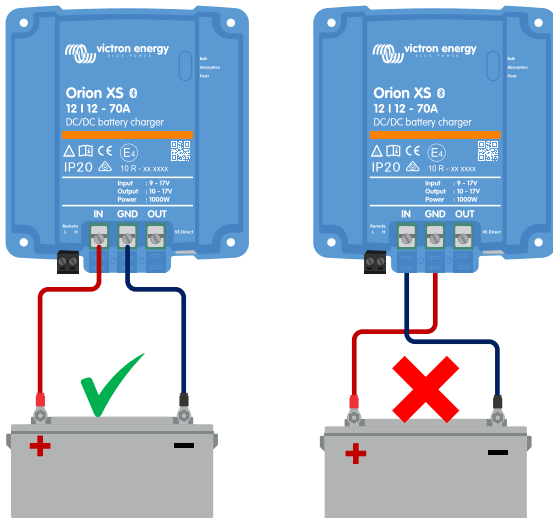

- Be aware that a red or positive labelled cable might not necessarily mean that the cable is indeed a positive cable. A wiring or labelling mistake could have been made during installation.
- Reverse battery polarity can be accompanied with a blown battery fuse (one that is located in the battery cable).



The Orion XS is not protected against reverse battery polarity; any damage caused by this is not covered under warranty.

5.1.5. Battery full

Once the battery is full, the Orion XS will stop charging or greatly reduce the charge current. This is especially the case when at the same time the DC loads in the system are not consuming any power from the battery.


To find out the battery's state of charge (SoC), check the battery monitor (if present), or alternatively, check what charge stage the controller is in. Also observe if the charge cycle is (briefly) progressing through these charge stages

- Bulk stage: 0-80% SoC
- Absorption stage: 80-100% SoC
- Float or storage stage: 100% SoC.

Be aware that it may also be possible for the Orion XS to think the battery is full when it is not. This can occur when the charge voltages have been set too low, causing the Orion XS to switch to the absorption or float stage prematurely.

5.1.6. Remote terminal is missing, is disconnected or external control is active

Generally speaking, both the remote connector and the wire loop need to be present for the controller to be operational. In some advanced systems, the remote on/off connector can be connected to an external device, a switch, a relay, or another type of external control, like a battery BMS system.

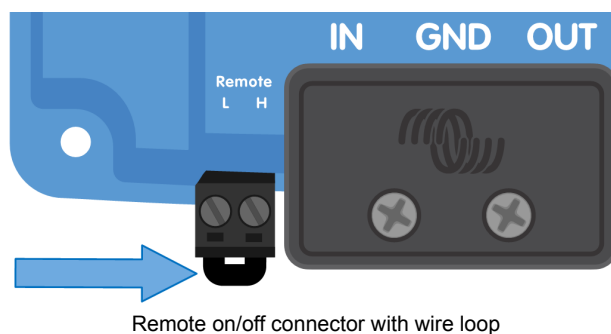

Remote on/off connector with wire loop

There are several ways to activate via remote on/off.

Use modes of the remote on/off:

- ON when the L and H terminals are interconnected via a switch or a relay contact
- ON when the L terminal is pulled to battery minus (ON switch level < 6V)
- ON when the H terminal is high (ON switch level > 4V)

General remote on/off terminal check

1. Check if the connector with the wire loop is present.
2. Check if the connector has been inserted all the way in.
3. Check that the wire loop is making electrical contact.



Be aware that if an external device is connected to the remote terminal, the wire loop has been removed, and one or two wires will be connected between the remote connector and the external device.

5.1.7. The charger is disabled

Check the VictronConnect app to make sure the charger has been enabled.



VictronConnect enable/disable charger setting

5.2. Batteries are undercharged

This section deals with possible reasons why the Orion XS is not sufficiently charging the batteries and the steps you can take to check or remedy the situation.

Some signs of undercharged batteries:

- The battery takes too long to charge (> 10hrs).
- The batteries are not fully charged at the end of the charge cycle.
- The charge current from the Orion XS is less than expected.

5.2.1. Too much DC load

The Orion XS not only charges the batteries but also provides power for the system's loads.

The battery will only be charged when the power available exceeds the power being drawn by the loads in the system, like lights, fridge, inverter, and so on.

If the system battery monitor is correctly installed and configured, you can see how much current is going in (or out) of the battery, and the Orion XS will tell you how much current it is generating.

A positive sign alongside the current reading means that current is flowing into the battery, while a negative sign indicates that current is being drawn from the battery.

5.2.2. Battery charge voltages are too low

If the battery voltages have been set too low, the batteries will not receive a full charge.

Check if the battery charge voltages (absorption and float) are set correctly. Consult the battery manufacturer's information for the correct charge voltages.

5.2.3. Battery is almost full

The Orion XS will reduce its charge current when the battery is almost full.

If the battery's state of charge is unknown, and the current is reducing while the engine is running, it can mistakenly be interpreted as the Orion XS being faulty.

The first current reduction takes place at the end of the absorption stage when the battery is approximately 80% charged.

During the absorption phase, when the battery is between 80% and 100% charged, the current is further reduced.

The float stage starts when the batteries are 100% full. During the float stage the charge current is very low.

To find out what the state of charge (SoC) of the battery is, check the battery monitor (if present), or alternatively, check the charge stage the Orion XS is in.

- Bulk: 0-80% SoC
- Absorption: 80-100% SoC
- Float or storage: 100% SoC

5.2.4. Battery cable voltage drop

If there is a voltage drop over the battery cables, the Orion XS will output the correct voltage, but the batteries will receive a lower voltage. Battery charging will take longer, potentially leading to undercharged batteries.

In case there is a large voltage drop, the battery cables and cable connection will need to be checked, and if there are issues, they will need to be rectified.


The voltage drop can have the following causes:

- Battery cables with insufficient cross-sectional area
- Badly crimped cable lugs or terminals
- Loose terminal connections
- Bad or loose fuse(s)


Battery cable voltage drop check

This check can only be performed if the Orion XS is in the bulk charge stage and is charging with full current.

1. Measure the voltage on the battery terminals of the Orion XS using the VictronConnect app or a multimeter.

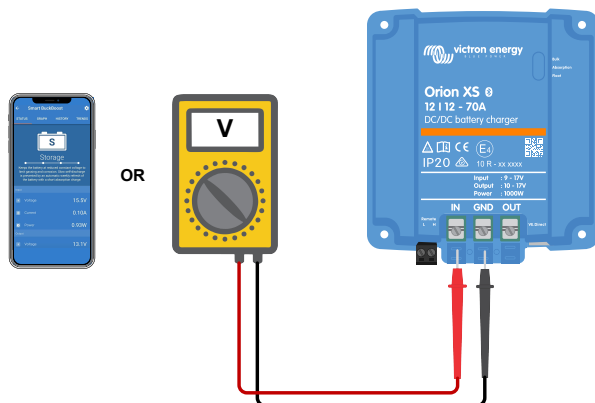

2. Measure the battery voltage on the terminals of the battery using a multimeter.

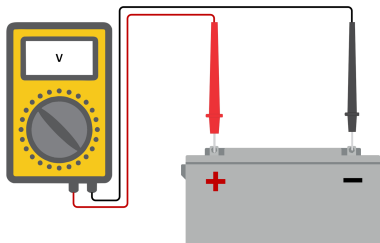

3. Compare the two voltages to see if there is a voltage difference.

5.2.5. Temperature difference between Orion XS and battery

It is important that the ambient temperatures of the battery and the controller are equal. The Orion XS will measure the ambient temperature at the start of the charge cycle and assume it is the same as the battery temperature. It will then adjust the charge voltage based on this temperature measurement and its compensation setting.

Once the Orion XS goes into float stage, it will measure the ambient temperature again and will use that measurement to adjust the voltages again.

If there is a large ambient temperature difference between Orion XS and battery, the battery will be charged at the wrong voltages.

5.2.6. Insufficient alternator power

Check if the Orion XS reaches the float charge stage. To investigate, look at the history tab in the VictronConnect app. The histogram displays how long the batteries have been charged in the Bulk, Absorption and Float stages for the last 40 cycles. If you click on one of the histogram columns, you will see a breakdown of the charge stages.

Use the charge times to see if the alternator power rating is properly sized for your requirements. A system which never reaches the float stage could have the following issues:

- Not enough power during idling: The power output of an alternator can be reduced to ~50% during idling.
- Too much load
- Overheated alternator causing it to reduce power output

5.2.7. Wrong temperature compensation setting

If the temperature compensation coefficient is set incorrectly, it can result in undercharging or overcharging of the batteries. You can adjust the temperature compensation setting through VictronConnect.

To determine the correct temperature compensation coefficient for your battery, consult the battery documentation. When in doubt, you can use the default value of $-16.20\text{mV}/^{\circ}\text{C}$ for lead-acid batteries and disable the temperature compensation setting for lithium batteries.

5.2.8. Battery charge current too low

Check the Input/Output current limit settings in the VictronConnect app.

If the Input/Output current limit has been set too low, it will take longer to charge the batteries.

5.3. Batteries are overcharged



Batteries that are being overcharged are very dangerous! There is a risk of battery explosion, fire or acid leakage. Do not smoke, create sparks or have open flames in the same room as where the batteries are located.



Overcharging batteries will cause battery damage and can be caused by:

- Incorrect charge voltage settings
- Battery voltage setting too high
- High current and undersized batteries
- Battery faults
- Too high current, while the battery is not accepting charge anymore because of ageing or prior mistreatment

5.3.1. Battery charge voltages too high

If the battery charge voltages are set too high, this will cause the batteries to overcharge.

Check if all the battery charge voltages (absorption and float) are set correctly.

The charge voltages have to match the recommended voltages as stated in the battery manufacturer's documentation.

5.3.2. Battery unable to deal with equalization

During equalization, the battery charge voltage will be quite high, and if the battery is unsuitable to be equalized, the battery will be overcharged.

Not all batteries can be charged with equalization voltages. Check with the battery manufacturer if your battery needs a periodic equalizing charge.

Generally speaking, sealed batteries and lithium batteries cannot be equalized.

5.3.3. Battery old or faulty

A battery that is at the end of its service life or has been damaged by incorrect use can be prone to being overcharged.

A battery contains a number of cells that are connected in series. When a battery is old or has been damaged, a likely scenario is that one of these cells is not operational anymore.

When the faulty battery is charged, the damaged cell will not accept charge, and the remaining cells will receive the broken cell's charge voltage and thus will be overcharged.

To fix this, replace the battery. In case of multiple battery systems, replace the whole battery bank. Mixing batteries of different ages in one battery bank is not recommended.

It is hard to tell what exactly happens to a battery during its lifetime. The Orion XS will keep 40 cycles of battery voltage history. If the system also contains a battery monitor, or if the system is connected to VRM, the battery voltages and the cycle history of the battery can be accessed. This will give a complete picture of the battery history, and it can be determined if the battery is near the end of its service life or has been abused.

To check if the battery is close to its cycle life:

1. Find out how many charge and discharge cycles the battery has been subjected to. Battery lifetime correlates to the number of cycles.
2. Check how deep the battery has been discharged on average. A battery will last for fewer cycles if deeply discharged, compared to more cycles if discharged less deep.
3. Refer to the battery datasheet to find out how many cycles at what average discharge the battery is capable of. Compare this with the battery history and determine if the battery is near the end of its service life.

To check if the battery has been misused:

1. Check if the battery has been totally discharged at all. Total and very deep discharge will damage a battery. Check the battery monitor setting history on the VRM portal. Look for the deepest discharge, the lowest battery voltage, and the number of full discharges.
2. Check if the battery has been charged with too high voltage. Very high charge voltage will damage the battery. Check the maximum battery voltage and the high voltage alarms in the battery monitor. Check if the measured maximum voltage has exceeded the battery manufacturer's recommendations.

5.4. Full rated output not reached

There are a few reasons why the Orion XS is not reaching its full-rated output.

• Alternator rating (during idling) too small

If the alternator power rating is less than the Orion XS nominal power rating, the Orion XS cannot output more power than the connected alternator can provide.

• Temperature protection active

When the Orion XS heats up, eventually the output current will derate. When the current is reduced, naturally the output power will reduce as well.

The controller is operational up to an ambient temperature of 60°C, with a full rated output up to 40°C when mounted on a vertical surface with the terminals facing downwards and sufficient free space for ventilation.

If the Orion XS is located in a closed enclosure, such as a cabinet, make sure that cold air can enter and hot air can leave the enclosure. Mount vents in the enclosure.

For very hot environments consider mechanical air extraction or provide air conditioning.

5.5. Communication issues

This section describes issues that might arise when the Orion XS Orion XS is connected to the VictronConnect app, other Victron devices or third-party devices.

5.5.1. VictronConnect issues



For a full troubleshooting guide on the VictronConnect app, see the [VictronConnect manual](#).

5.5.2. VE.Direct port communication issues

These occurrences are not common, and if they occur, it is probably due to one of the issues listed in this paragraph.

- **Physical cable connector or data port issues**

Try using a different VE.Direct cable to check if the unit will now communicate. Ensure that the connector is inserted properly and deep enough. Is the connector damaged? Inspect the VE.Direct port; are there any bent pins? If this is the case, use long-nose pliers to straighten the pins **while the unit is not powered**.

- **VE.Direct communication issues**

To check if VE.Direct communication is operating correctly, connect the Orion XS to a GX device and check if the controller shows up on the GX device's list. If it does not show up, check that the TX port function in VictronConnect is set to Normal communication.

5.5.3. Bluetooth issues

Please note that it is highly unlikely that the Bluetooth interface is faulty. The problem is most likely caused by something else.

Use this section to quickly rule out some of the common causes of Bluetooth issues. For a full troubleshooting guide see the [VictronConnect manual](#).

- **Check if Bluetooth is enabled**

It is possible to enable/disable Bluetooth in the product settings. To re-enable:

Connect to the Orion XS via the VE.Direct port. Navigate to the controller settings and then to Product info. Re-enable Bluetooth.

- **Check if the controller is powered up**

Bluetooth is active as soon as the Orion XS is powered up.

This can be checked by looking at the LEDs:

If all LEDs are off, the unit is not powered up.

If any of the LEDs are on, blinking or pulsing at a few seconds interval, the unit is powered up and Bluetooth should be functional.

- **Check that Bluetooth is in range**

In open space, the maximum Bluetooth distance is about 20 meters. In a build-up area, inside a house, a shed, a vehicle or a boat this distance can be a lot less.

- **The Windows VictronConnect app does not support Bluetooth**

The Windows version of the VictronConnect app does not support Bluetooth. Use an Android, iOS or macOS device instead. Or alternatively, connect using a VE.Direct to USB interface.

- **The controller is missing in the VictronConnect device list**

Some steps to try to resolve this issue are:

Press the orange refresh button at the bottom of the VictronConnect device list and check if the Orion XS is now listed.

Only one phone or tablet can be connected to the Orion XS at any given time. Make sure no other devices are connected and try again.

Try to connect to another Victron product, does this work? If that also does not work, there probably is an issue with the phone or tablet.

Rule out any issues with the phone or the VictronConnect app by using another phone or tablet and try again.

If still unresolved, refer to the VictronConnect manual.

- **PIN code lost**

If you have lost the PIN code, you will need to reset the PIN code to its default PIN code. This is done in the VictronConnect app: Navigate to the Device list of the VictronConnect app. Click on the option symbol next to the Orion XS listing. A new

window will open which allows you enter the Orion XS's unique PUK code as printed on its product information sticker. When the reset succeeds, the PIN code is reset back to: 000000.

- **How to communicate without Bluetooth**

In case Bluetooth is not functional, turned off or unavailable, VictronConnect can communicate via the unit's VE.Direct port. Or, if the unit is connected to a GX device, VictronConnect can communicate via VRM.

5.6. Emergency reverse charge issues

This section covers problems with the emergency reverse charge function.

For a description of the function, the conditions under which an emergency reverse charge is possible and the two phases of the sequence, see [Emergency reverse charge \[15\]](#).

5.6.1. The emergency reverse charge button is greyed out

The emergency reverse charge button on the Status screen is always present, but it is only active while an emergency reverse charge is possible. It is greyed out when one of the following applies:

- The Orion XS is set to power supply mode. The emergency reverse charge function is only available in charger mode.
- The Orion XS is charging. An emergency reverse charge is only possible while the charger is off because the input voltage lock-out is active, or because the engine shutdown detection has determined that the engine is not running.

If the button is not shown at all, the firmware of the Orion XS or the version of the **VictronConnect** App does not yet support the emergency reverse charge function. The function requires Orion XS firmware v1.15 and VictronConnect v6.43 or later.

5.6.2. The reverse charge current is low or zero

The current actually transferred to the starter battery can be lower than the limit stated in the app, and in some cases close to zero. Possible causes:

- Long or thin cables between the auxiliary battery and the Orion XS, or between the Orion XS and the starter battery. The voltage drop over the cables limits the current that can be transferred.
- The internal resistance of the starter battery is high, because of a poor state of health or a small capacity.
- The starter battery is already fully charged.
- The auxiliary battery is nearly depleted. The Orion XS then maintains the auxiliary battery voltage at 12 V and reduces the reverse charge current to prevent deep discharge. If the auxiliary battery is already at or below this level, no current is transferred at all until its voltage rises above the level again.
- Another Orion XS connected in parallel is still in normal operation. It reads the voltage rise on the starter battery as a running engine and starts charging forward against the unit that is reverse charging. Start an emergency reverse charge on all parallel units, or switch the others off.
- The starter battery or the auxiliary battery is defective or disconnected. Measure both battery voltages at the terminals of the Orion XS.

5.6.3. The engine does not start after Battery ready

Battery ready indicates that the 15-minute emergency reverse charge has finished. It does not guarantee that the starter battery holds enough energy to crank the engine.

- Little energy may have been transferred during the emergency reverse charge. Check the input current that was reached during the emergency reverse charge; see [The reverse charge current is low or zero \[41\]](#).
- If the starter battery voltage collapses as soon as the engine is cranked, the battery might no longer be able to deliver the current required for starting. An emergency reverse charge cannot restore a starter battery that is defective or at the end of its service life.

5.7. Settings or firmware issues

5.7.1. Incorrect settings

Incorrect settings can cause strange behaviour. Check that all settings are correct.

- If in doubt, it could be an option to reset all settings to default using the VictronConnect app and then make all required settings.

- Consider saving the existing settings before performing a reset.
- In most cases, the default setting can usually be used with only minor changes.
- If help is required with making settings, please refer to the manual or contact your Victron supplier or distributor.

5.7.2. Firmware issues

To rule out a firmware bug, update the firmware.



Always write down the firmware number before and after the update. This can be useful information should you need to request support.

On first connection, the controller might have updated the firmware. If the controller did not automatically ask for a firmware update, check if the controller is running the most up-to-date firmware and perform a manual update:

1. Connect to the controller
2. Click on the settings symbol
3. Click the option symbol
4. Go to product info
5. Check if you are running the latest firmware and look for the text: "This is the latest version"
6. If the controller does not have the most up-to-date firmware, perform a firmware update by pressing the update button

5.7.3. Interrupted firmware update

This is recoverable and is nothing to worry about. Just try to update the firmware again.

5.8. Error and warning code overview

The error and warning codes are displayed on the VictronConnect app or via a connected GX device.

Error 1 - Battery temperature too high

- This error will auto-reset after the battery temperature has dropped. The charger will stop charging to prevent damaging the battery. If no external battery temperature sense is connected, it is assumed that during charger start-up or float, the Orion XS and battery temperature are equal. Therefore, a too hot charger in this state is interpreted as a too hot battery.

Error 2 - Battery voltage too high

- This error will auto-reset after the battery voltage has dropped. This error can be due to other charging equipment connected to the battery or a fault in the charge controller.

Error 17 - Controller overheated despite reduced output current

- This error will auto-reset after the charger has cooled down. Check the ambient temperature and check if the Orion XS is properly mounted for cooling.

Error 21 - Current sensor issue

- The current measurement is out of range. Disconnect all wires, and then reconnect all wires, to make the charger restart. This error will not auto-reset. If the error remains, please contact your dealer, there might be a hardware defect.

Error 26 - Terminal overheated

- Power terminals overheated, check wiring, including the wiring type and type of strands, and/or fasten bolts if possible. This error will auto-reset.

Error 27 - Charger short circuit

- This condition indicates an over-current condition on the battery side. This error will auto-reset. If the error does not auto-reset, disconnect the charge controller from all power-sources, wait 3 minutes, and power up again. If the error persists, the charge controller is probably faulty.

Error 28 - Power stage issue

- This error will not auto-reset. Disconnect all wires, and then reconnect all wires. If the error persists the charger is probably faulty.

Error 33 – Input voltage to high

- This error will auto-reset after input voltage has dropped to a safe limit.

Error 67 - BMS Connection lost

- This error shows when the charger is configured to be controlled by a BMS but does not receive any BMS control messages.
- In that situation; the charger stops charging by reducing its output voltage to the battery base voltage (12 V). This is a safety mechanism, and the reason for still enabling the output is to allow a system to self-recover from a low battery voltage situation.
- This error is only shown when the device is ready to initiate charging, not during "off" state. In case there is a permanent problem, the error will appear when willing to charge and clear when in "off" state, and so forth.
- 15s after the connection is lost the charger will lower the output voltage to base level, but the error is first shown after 3min, this allows the BMS to reconnect and prevents overkill of error notifications.
- Also, changing to base voltage is shown in VictronConnect as going from bulk directly to float, after the communication is re-established, the charger will go back to bulk again.

Error 116 - Calibration data lost

- If the unit does not work and error 116 pops up as the active error, the unit is faulty. Contact your dealer for a replacement.
- If the error is only present in the history data and the unit operates normally, this error can be ignored safely. Explanation: when the units power up for the very first time in the factory, it does not have calibration data and an error 116 is logged. Obviously, this should have been cleared, but in the beginning, units left the factory with this message still in the history data.

Error 117 - Incompatible firmware

- This error indicates that a firmware update did not complete, so the device is only partially updated. Possible causes are: device out of range when updating over the air, a cable got disconnected or power was lost during the update session. To fix this the update needs to be retried.
- When your GX device is connected to VRM, you can do a [remote firmware update](#). You can do this via the VRM website or using the VRM tab in VictronConnect. VictronConnect can also be used together with the firmware file to update using a Bluetooth connection.

Error 119 - Settings data lost

- The charger cannot read its configuration, and stopped. This error will not auto-reset. To get it working again:
 1. First, restore it to factory defaults. (top right in Victron Connect, click on the three dots).
 2. Disconnect the charge controller from all power-sources.
 3. Wait 3 minutes, and power up again.
 4. Reconfigure the charger.
- Please do report this to your Victron dealer and ask him to escalate it to Victron; as this error should never happen. Preferably include firmware version and any other specifics (VRM URL, VictronConnect screenshots or similar).

Error 120 - Internal supply voltage error

- The unit performs internal diagnostics when activating its internal voltage supplies. This error indicates that something is wrong with an internal supply voltage.
- This error will not auto-reset. Check the installation and restart the unit using the power-switch. If the error persists, the unit is probably faulty.

Error 122 - History data corrupted

- This error will not auto-reset.
- Clear the history data in VictronConnect to reset the error.

Warning 150 - Battery temperature too high

- Output voltage is reduced to nominal voltage (12V) to prevent battery damage.
- This warning will auto-reset after the battery temperature has dropped. If no external battery temperature sense is connected, it is assumed that during charger start-up or float, the Orion XS and battery temperature are equal. Therefore, a charger that is too hot in this state is interpreted as a too hot battery.

Warning 151 - Battery temperature too low

- The charging has been stopped because the battery temperature is too low.
- This is part of the battery protection mechanism and it is not necessarily indicating a problem. Lithium batteries can be damaged by charging them at low temperatures. If you think that this protection shouldn't have been triggered, contact your installer to adjust the related setting.

Warning 160 - Current derate due to controller high temperature

- The current is derated to control the internal temperature.
- This warning will auto-reset after the charger has cooled down. Check the ambient temperature and check if the Orion XS is properly mounted for cooling.

Warning 161 - Short circuit detected

- Over-current condition detected on the battery side.
- This warning will auto-reset. If the warning does not auto-reset, disconnect the charge controller from all power-sources, wait 3 minutes, and power up again. If the warning persists, the charge controller is probably faulty.

Warning 162 - Power stage issue

- Current rating limited to half of nominal current.
- Disconnect all wires, and then reconnect all wires. If the warning persists, the charge controller is probably faulty. This warning will not auto-reset.

6. Technical data

6.1. Technical specifications

Orion XS 12/12-70A DC-DC battery charger	
Input voltage range	9-17 V
Output voltage adjust range	10-17 V
Output voltage tolerance	+/- 0,25 % (max)
Output voltage noise	10 mV rms
Input and output current setting range	1 - 70 A
Maximum constant short-circuit current	70 A
Continuous output power up to 40 °C ¹⁾	1000 W ⁴⁾
Maximum efficiency	98,5 %
No-load current consumption	< 100 mA
Standby current consumption	< 1,5 mA
Can be used as power supply	Yes, output voltage can be set with VictronConnect App
Emergency reverse charge function	Yes, activated via VictronConnect App, up to 35 A ⁶⁾
Communication ports	
VictronConnect App / Bluetooth Smart	Yes
Bluetooth power and frequency	+4 dBm 2402 - 2480 MHz
VE.Smart Networking	Yes ²⁾
VE.Direct	Yes (including DVCC) ³⁾
Other	
Operating temperature range	-20 to +60 °C (derating 1,5 % per °C above 40 °C)
Humidity	95 % non-condensing
Maximum altitude	2000 m
Pollution degree	PD2
Overvoltage category	OVC 1
Protection category	IP20 ⁵⁾
DC connection	Screw terminals
Maximum cable cross-section	4 AWG (25 mm ²)
Weight	0,340 kg (0,74 lb)
Dimensions h x w x d	137,3 x 123,1 x 40 mm (5,4 x 4,85 x 1,6 inch)
Standards	
Safety	IEC 62477-1
EMC	EN 300 328, EN 301 489-1, EN 301 489-17, FCC 15B, ICES-003
Automotive Directive	ECE R10-7

Orion XS 12/12-70A DC-DC battery charger

- ¹⁾ This applies to optimal cooling where the product is mounted as indicated in the manual with sufficient free space. In case of limited cooling, e.g. due to insufficient airflow, the charging current will be regulated back sooner.
- ²⁾ VE.Smart Networking features will be receiving Vsense, Tsense and Isense data from the wireless network, for example from a SmartShunt, BMV or Smart Battery Sense. Synchronised charging is not supported.
- ³⁾ DVCC compatibility requires Orion XS firmware v1.03 or later and Venus OS firmware v3.20 or later on the GX device.
- ⁴⁾ This value represents the nominal power level at a typical voltage of 14 V. Power is calculated as the product of the applied voltage and current ($P = V \times I$). Examples: $12\text{ V} \times 70\text{ A} = 840\text{ W}$, $14,3\text{ V} \times 70\text{ A} = 1000\text{ W}$
- ⁵⁾ Power electronics are enclosed in IP65 housing
- ⁶⁾ Reverse charges the starter battery from the auxiliary battery for 15 minutes, followed by a 5-minute settling period during which the engine can be started. The reverse charge current is half the rated charge current, or the lowest configured input or output current limit if lower. Requires Orion XS firmware v1.15 and VictronConnect v6.43 or later.

6.2. Compliance

Orion XS 12/12-50A DC-DC battery charger, Orion XS 12/12-70A DC-DC battery charger and Orion XS 1400 DC-DC battery charger EU & UK Compliance

SIMPLIFIED EU DECLARATION OF CONFORMITY: Hereby, Victron Energy B.V. declares that the Orion XS 12/12-70A DC-DC battery charger is in compliance with Directive 2014/53/EU and S.I. 2017/1206. The full text of the EU & UK declaration of conformity is available at the following internet address: <https://ve3.nl/7r>.

UK PSTI STATEMENT OF COMPLIANCE: We, Victron Energy B.V., confirm that our product Orion XS 12/12-70A DC-DC battery charger complies with the security requirements outlined in Schedule 1 of The Product Security and Telecommunications Infrastructure (Security Requirements for Relevant Connectable Products) Regulations 2023. The official Statement of Compliance can be downloaded from <https://ve3.nl/7r>.

Orion XS 12/12-50A DC-DC battery charger, Orion XS 12/12-70A DC-DC battery charger and Orion XS 1400 DC-DC battery charger FCC and Industry Canada Compliance

This device complies with part 15 of the FCC Rules and to RSS of Industry Canada. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.



Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de Classe B est conforme à la norme Canadienne ICES-003.

This device contains a transmitter with FCC ID: SH6MDBT42Q.

This device contains a transmitter with IC: 8017A-MDBT42Q.

To comply with FCC and Industry Canada RF radiation exposure limits for general population, the antenna(s) used for this transmitter must be installed such that a minimum separation distance of 20cm is maintained between the radiator (antenna) and all persons at all times and must not be co-located or operating in conjunction with any other antenna or transmitter.

6.3. Enclosure dimensions

